

DM4000U

SMART INDICATOR

Whilst every effort has been taken to ensure the accuracy of this document, we accept no responsibility for damage, injury, loss or expense resulting from errors or omissions, and reserve the right of amendment without notice.



This document is issued by Status Instruments Ltd and may not be reproduced in any way without the prior written permission of the company.

CONTENTS

GETTING STARTED

1.0	INTRODUCTION	3 - 5
2.0	UNPACKING	6

INSTALLATION

3.0	WIRING	7 - 24
-----	--------	--------

USER GUIDE


4.0	PROGRAMMING	25 - 67
5.0	OPERATION	68 - 73
Appendix A	FITTING OF LEGEND ID	74
Appendix B	SPECIFICATION	75 - 79
Appendix C	TROUBLESHOOTING	80 - 81
Appendix D	MAINTENANCE	82
Appendix E	USER COMMUNICATION SOFTWARE	83 - 92
Index		93 - 94

GETTING STARTED

1.0 INTRODUCTION


This instrument is a universal digital indicator which supports a wide range of input types. A great advantage with this unit is its ability to adapt to a wide variety of applications. A comprehensive set of programming menus allow the instrument to be entirely re-configured from the keypad.

The diagram below identifies features on the front panel.

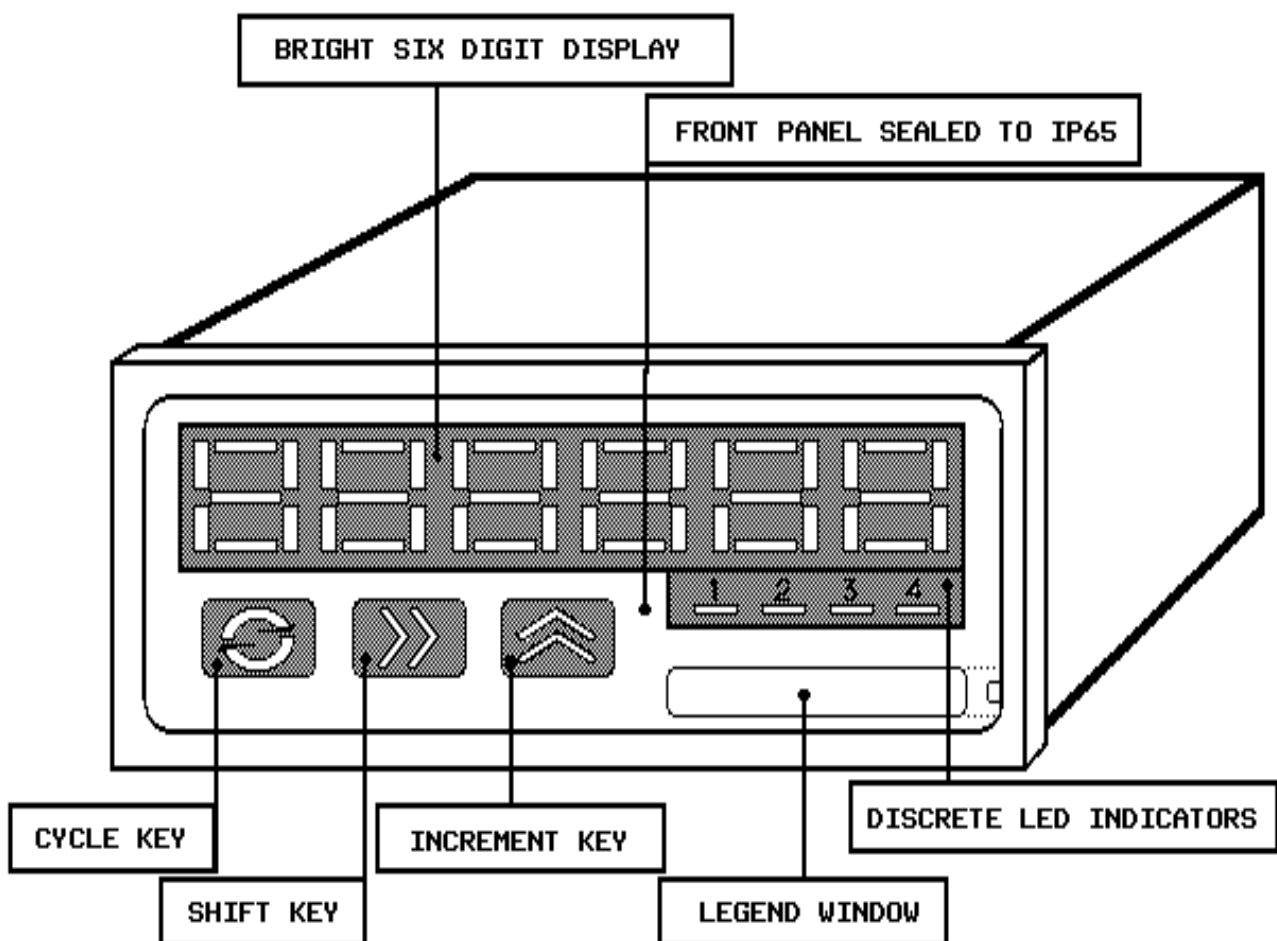


The diagram of the rear panel below shows the slot positions for all electrical connections.

There are two output slots into which the user may fit a range of options, including relays, current re-transmission and voltage output boards. In addition there is also a communications board slot allowing up to 30 units to be directly networked together to a host computer.

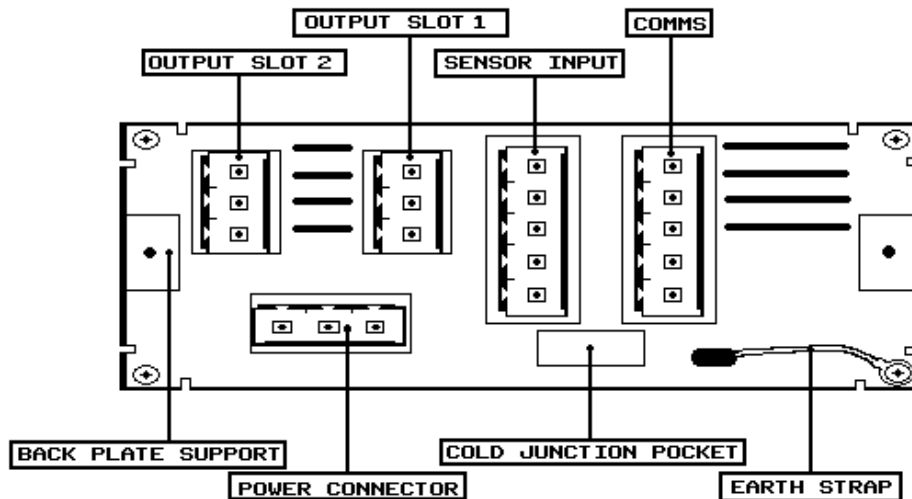


A schematic of the unit showing internal power supplies and possible options is shown below

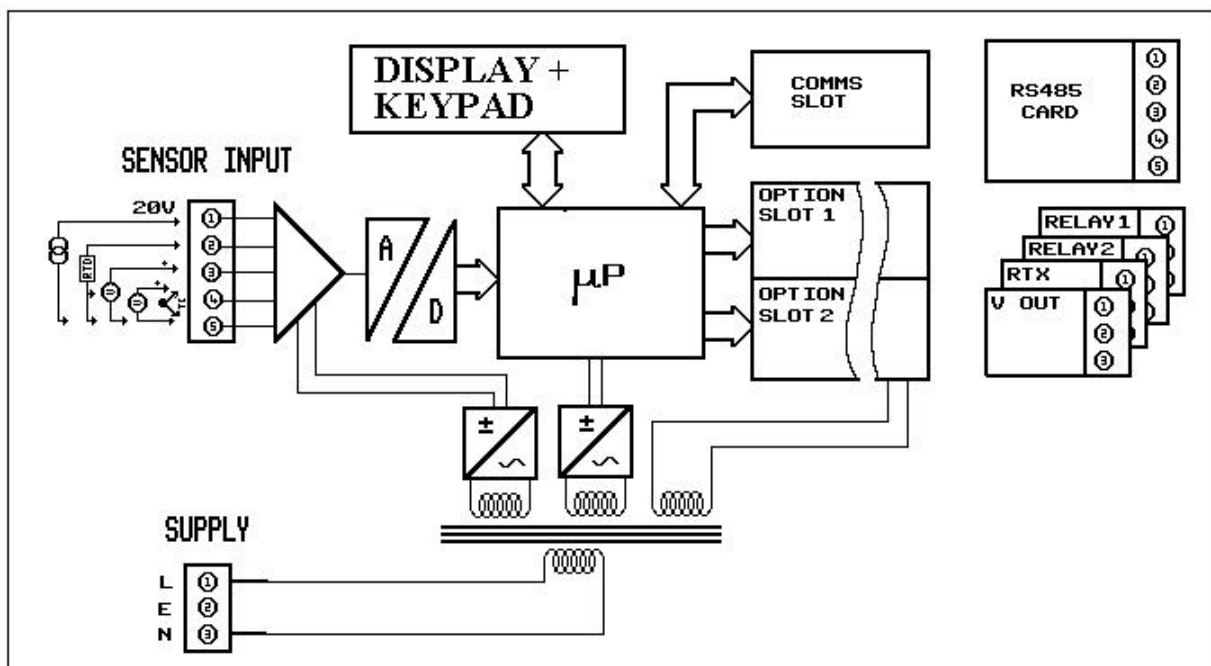


2.0 UNPACKING

Please inspect the instrument carefully for signs of shipping damage. The packaging has been designed to afford maximum protection, however, we can not guarantee that undue mishandling will not have damaged the instrument. In the case of this unlikely event, please contact your supplier immediately and retain the packaging for our subsequent inspection.

Check that the following items are included with the instrument. Note that if there are output options included there will be additional connectors.

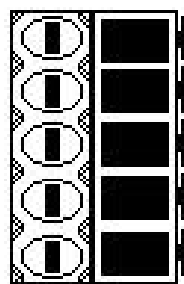


**SENSOR
INPUT
SOCKET**

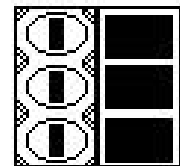

POWER SOCKET

BACKPLATE AND FIXING SCREWS

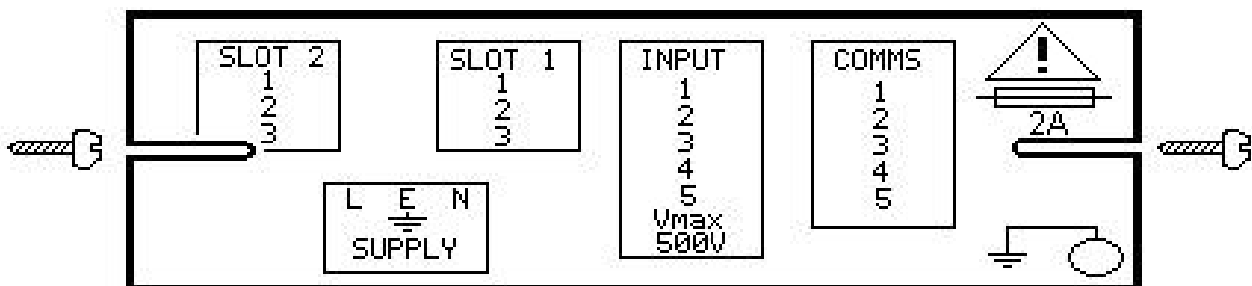

INSTALLATION

SAFETY INFORMATION

THIS SECTION FOR USE BY COMPETENT PERSONNEL ONLY


- **WARNING** **READ SAFETY INFORMATION BELOW BEFORE INSTALLATION**
- **WARNING** Hazardous voltages may be present on the terminals - the equipment must be installed by suitably qualified personnel and mounted on an enclosure providing protection to at least IP20.
- **ISOLATION** The power supply terminals and associated internal circuitry are isolated from all other parts of the equipment in accordance with BS EN61010-1 for connection to a Category II supply (pollution degree 2)

Functional isolation (500v max) is provided between input and output circuits, and between inputs and communications (where fitted).

Any terminals or wiring connected to the input, output or communications terminals which are **accessible in normal operation** must **ONLY** be connected to signals complying with the requirements for **Safety extra low voltage (SELV)** circuits.
- **WARNING** If not installed in accordance with these instructions, protection against hazards may be impaired
- Installation overvoltage category - 2 (as per BS EN61010-1)
- (If this equipment is to be used in environments with overvoltage category 3, transient suppressors should be installed on wiring greater than 50VAC or 75VDC).
- The Mains supply to the equipment must be protected by a 1Amp fuse and a suitable switch or circuit breaker which should be near the equipment.
- The equipment contains no user serviceable parts.


MECHANICAL INSTALLATION

When installing the instrument into the panel, the following dimensions should be taken into account.

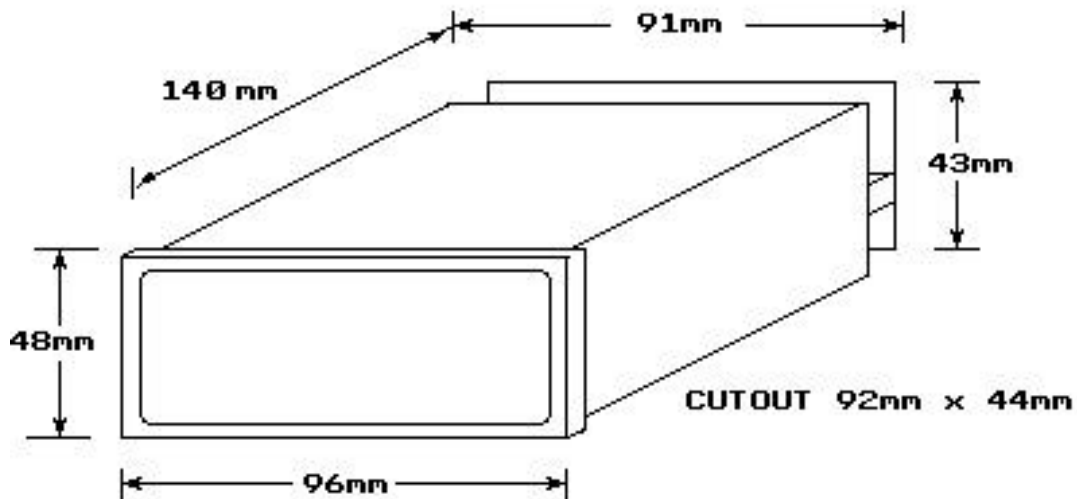

The unit is held in the Panel by two metal clamp bars, on diagonally opposite corners, fitted from the rear. A gasket is available, and should be fitted wherever sealing of the instrument is required. See diagram below.

The maximum panel thickness is 3.5mm with a gasket and 4.5mm without. The gasket has a self adhesive side which should be stuck to the panel around the cutout. The instrument may then be inserted and tightened against the gasket to form a seal. The panel should be clean and smooth for the seal to be effective.

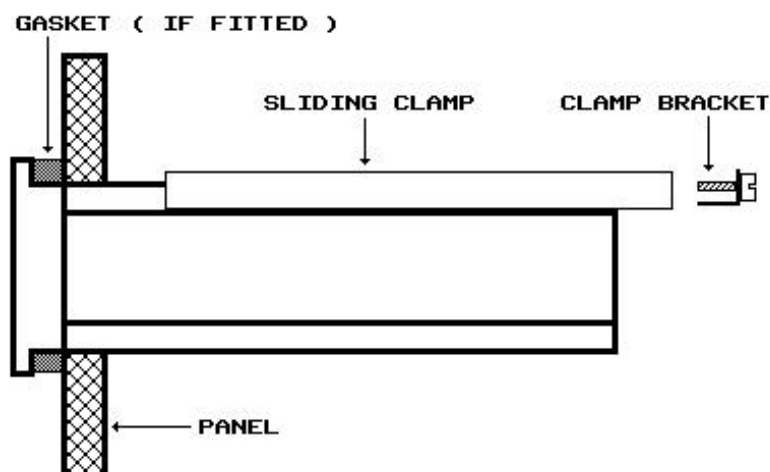

3.0 WIRING

This section describes how the instrument should be wired for the Power Supply, Input Sensor or any Output options that may be fitted. All connections are made to three or five way sockets which are removable for ease of wiring.

Installation should be undertaken in accordance with relevant sections of BS6739 - British Standards code of practice for "Instrumentation in Process Control Systems: Installation design and practice".


See important safety information on page 8

3.1 POWER SUPPLY

The Power supply rating will be indicated on the top of the instrument. **Ensure that this is correct for the voltage that is to be connected.** If there is a difference, refer to Service Manual for details of power supply adjustment.

Note that the power supply socket has had polarisation keys fitted to prevent insertion into any other plug at the rear of the instrument.

The connection is made as shown. Ensure that no bare wire protrudes from the rear of the power connector risking a short circuit.

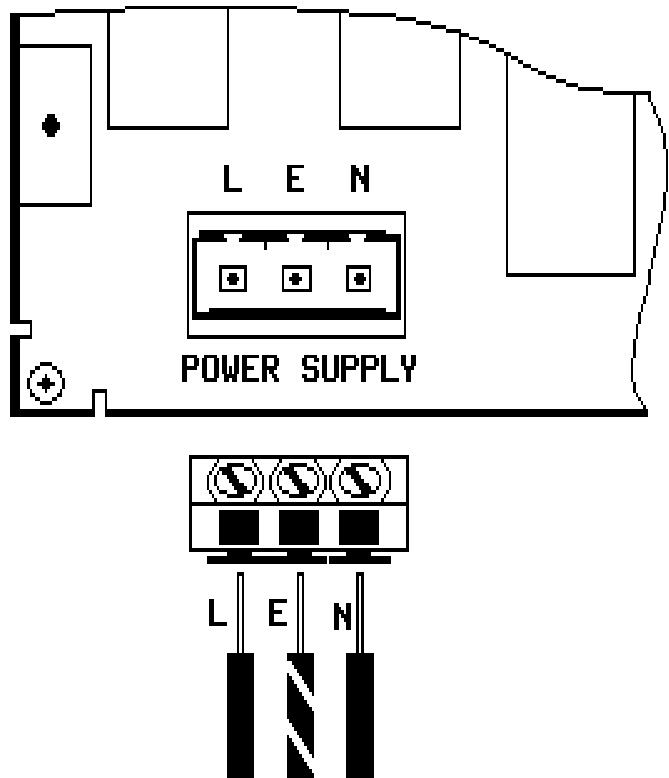


3.2 WIRING PRECAUTIONS

The unit can accept a variety of sensor inputs, some of which produce very small voltages. Therefore it is advisable to adhere to the following rules of good installation practice.


- Do not install close to switchgear, electromagnetic starters, contactors, power units or motors.
- Do not have power or control wiring in the same loom as sensor wires.
- Check power supply voltage is the same as printed on the label attached to the unit.
- Check wires (especially the power supply voltage wires) are not loose before switching on the unit.
- Use screened cable for sensor wiring with the screen earthed at one end only.
- Follow the wiring instructions in this manual

3.3 SENSOR CONNECTIONS

All sensor connections are made via the five way socket at the rear of the unit as shown below.

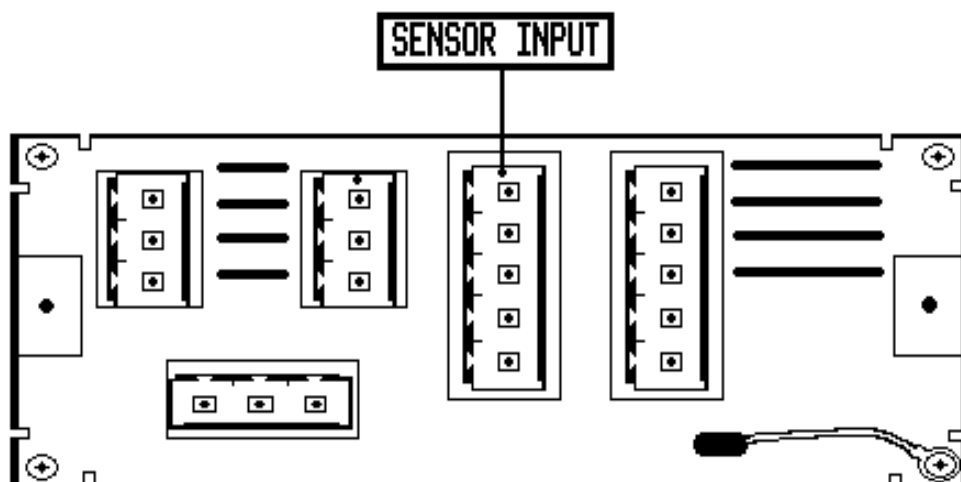

All sensor connections are summarised in the diagram below.

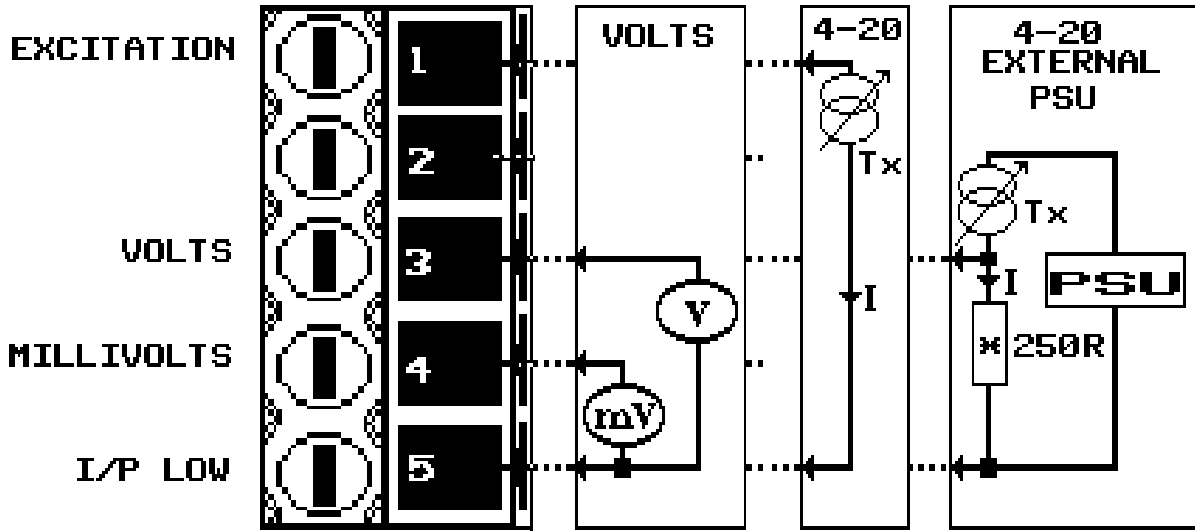

* EXTERNAL RESISTOR


3.3.1 DC VOLTAGE INPUTS

The unit has two individual voltage inputs. One supports millivolt inputs (up to 100mV), and the other, voltage inputs up to 10 volts.

If the voltage input to be measured is to be no greater than 100mV it is connected to the millivolts input. If the signal is less than 10 volts but greater than 100mV, it is connected to the Voltage input. Any voltages greater then 10 volts may still be measured, but must be divided down first. Each of these cases is discussed in more detail below.


3.3.1.1 MILLIVOLTS INPUT

This input accepts signals up to +/-100mV in normal operation. The signal source must be connected to pins 4 and 5 as shown opposite.

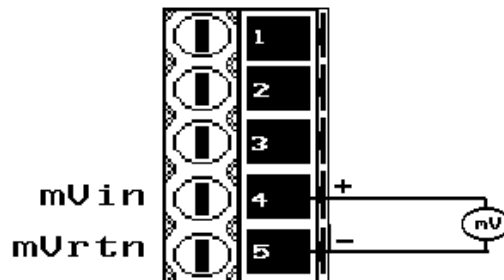


3.2.1.2 VOLTAGE INPUT

This input pin can take voltages up to 10 volts. The signal should be connected between pins 3 and 5 as indicated.

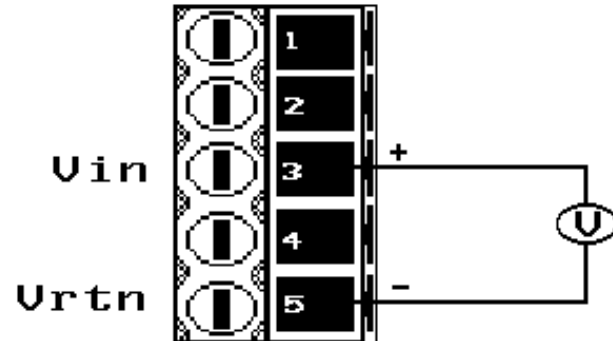

3.2.1.3 VOLTAGES GREATER THAN 10 VOLTS

In order for these to be measured correctly, it is necessary to connect some simple external circuitry outside the unit to divide down the voltage to a nominal maximum of 10volts. This is done using a resistor divider chain as shown in the diagram below. The choice of resistors are given as the nearest preferred values to those calculated in the equations for R1 and R2 below. It is possible to correct for any errors in the divide down chain by making R2 a trimmer, or correct by adjustment of scale range. Care must be taken to insulate any high voltages to protect from electric shocks or damage to any other equipment.

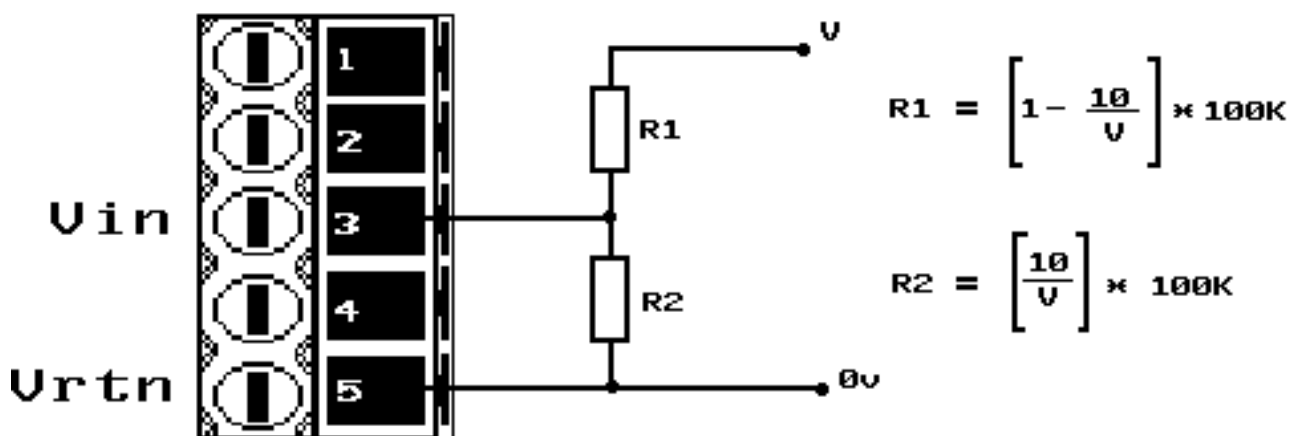


3.2.2 CURRENT INPUTS

There are two types of current measurement possible, the first type measures the current of an external loop, that is, a current that has been generated from an external power supply, or from another instrument. The second type measures current generated from the units own 20V excitation supply. Before connecting up a current input it is important to establish which one of these two groups apply.


3.2.2.1 CURRENT MEASUREMENT OF AN EXTERNALLY GENERATED LOOP

In order to measure the current in an externally generated loop, it is necessary to insert a resistor in-circuit and use the instrument to measure the resultant voltage drop. Note that the instrument will need to be configured as a 1-5V input and not a 4-20mA input; this is described later in the programming section. The diagram shows the necessary connections.

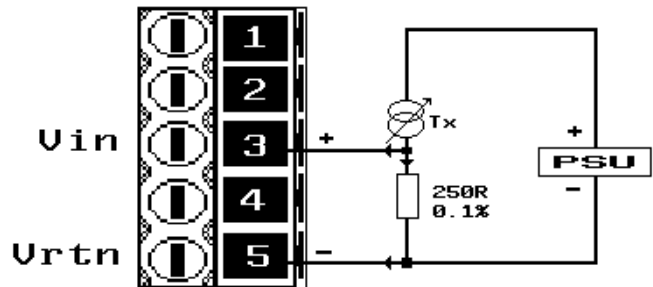


3.2.2.2 CURRENT MEASUREMENT OF AN INTERNALLY GENERATED LOOP

The instrument has an excitation supply which can be used for generating a current loop. If this is used, the circuit is connected in the following way. Note that the current input has an internal impedance of 50 ohms.

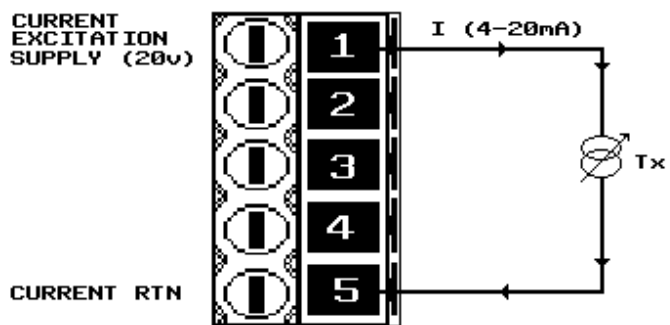

3.3.3 THERMOCOUPLE INPUTS


Thermocouples are simply connected to the millivolt input as shown opposite. The cold junction compensation is performed by the integral sensor at the rear of the unit or by a programmable cold junction value. For best accuracy, it is important that the rear plate is fitted to prevent draughts causing temperature differences between the cold junction sensor and the thermocouple connection with the device.

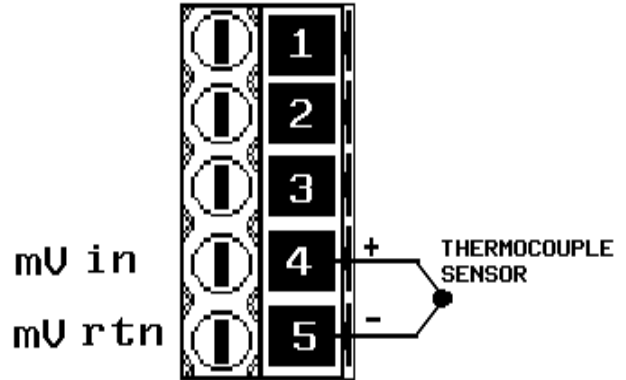

3.3.4 Pt100 RESISTANCE TEMPERATURE DETECTORS (RTDs)

These detectors are for platinum resistance inputs (Pt100) to BS1904 or DIN 43760 three wire. RTDs should be connected using three identical wires in order that measurement errors due to lead wire resistances can be eliminated. The connections should be made as shown in the diagram opposite.


If it is necessary to use a two wire sensor, then it should be connected across pins 2 and 4, with a link added between pins 4 and 5. It must be noted, however, that this configuration will suffer from inaccuracies due to the total series resistance of the wiring.

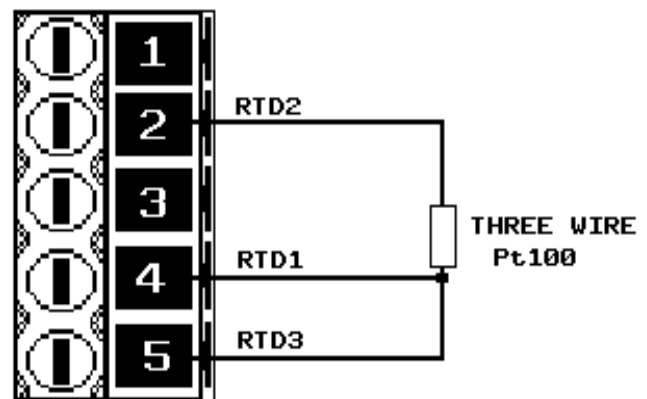

3.3.5 TRANSDUCER BRIDGE INPUT

A transducer bridge requires two sets of connections. A power supply and bridge output. The bridge output is treated as a millivolts signal and connected between pins 4 and 5 as in the diagram below.

Note that the power supply could be from the units bridge excitation output option or an external power supply.

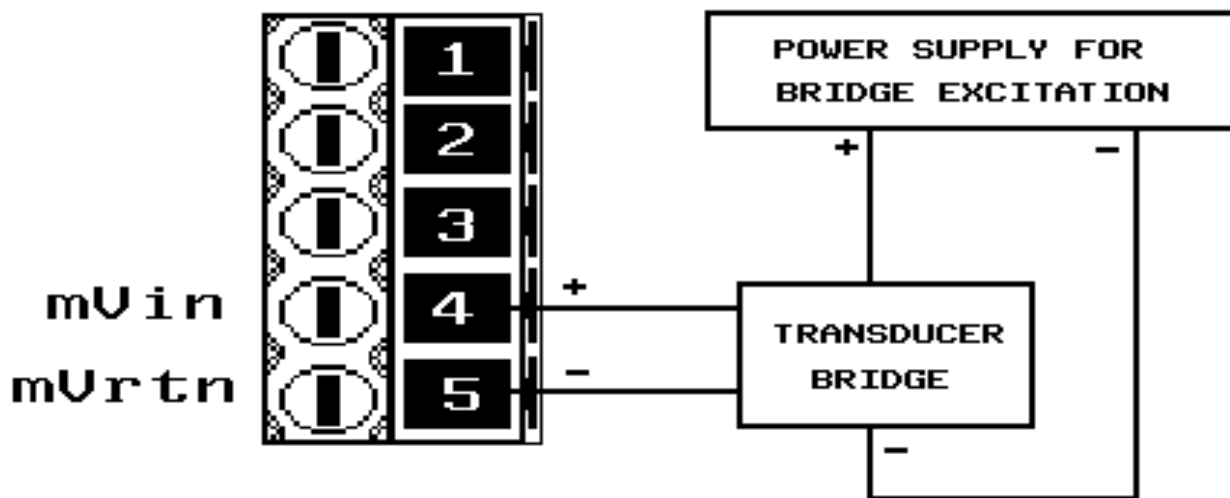

3.4 WIRING THE OUTPUT OPTIONS


This section applies to optional outputs fitted to the instrument. There are four types of output option available; Change-Over Relay, Dual Relay, Current Retransmission and Programmable voltage Output. These options may be fitted to either slot in any combination.

There is, however, a restriction when using Programmable Voltage Output with the Current Retransmission card or another Voltage Output. The combined maximum current should not exceed 50mA; the supply capacity of the Output options. Another consideration with a pair of analogue output options (Voltage or Current) is that although there is 500V * isolation from the Input, there is no isolation between output slots.

* See safety information on page 8



3.4.1 RELAY OUTPUTS, option 1 and 2

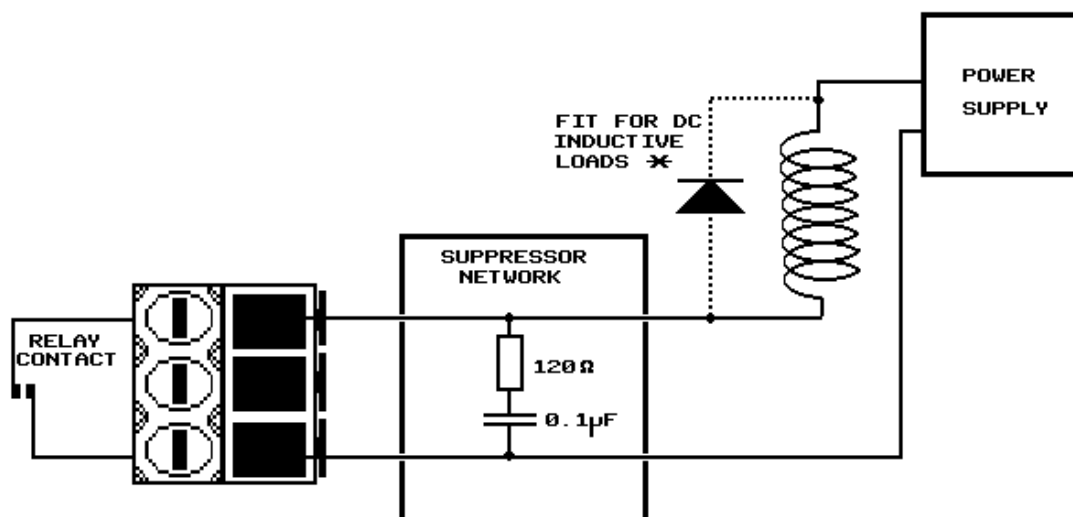There are two types of relay outputs available, Dual relay and Change-Over relay. The dual relay board has two **independent** contacts **sharing the same common**. The Change-over relay has a single contact with a Normally Open and Normally Closed output available. The power-off state of the Dual Relay is normally closed, but may be changed, if required, by modifying hardware links on the board.



It is recommended that a proprietary suppressor network is fitted as close as possible to the inductive load. DC inductive loads should also have a reverse biased diode connected as shown.


The contact states both these types of relays are summarised in the table below.

	ALARM OPTION	POWER OFF	POWER ON	
			NO ALARM	IN ALARM
	NON INV	1:3 CLOSED 2:3 OPEN	1:3 CLOSED 2:3 OPEN	1:3 OPEN 2:3 CLOSED
	INV	1:3 CLOSED 2:3 OPEN	1:3 OPEN 2:3 CLOSED	1:3 CLOSED 2:3 OPEN
	NON INV	1:3 CLOSED 2:3 CLOSED	1:3 CLOSED 2:3 CLOSED	1:3 OPEN 2:3 OPEN
	INV	1:3 CLOSED 2:3 CLOSED	1:3 OPEN 2:3 OPEN	1:3 CLOSED 2:3 CLOSED

If the current to be switched is very low (<100mA) the varistors on the relay board may need to be removed.

3.4.2 Current Output (Retransmission), option 03

The Current output board can support current loops generated from an external power supply, or generate a loop source from the instrument itself. Both of these cases are shown in the diagrams below.

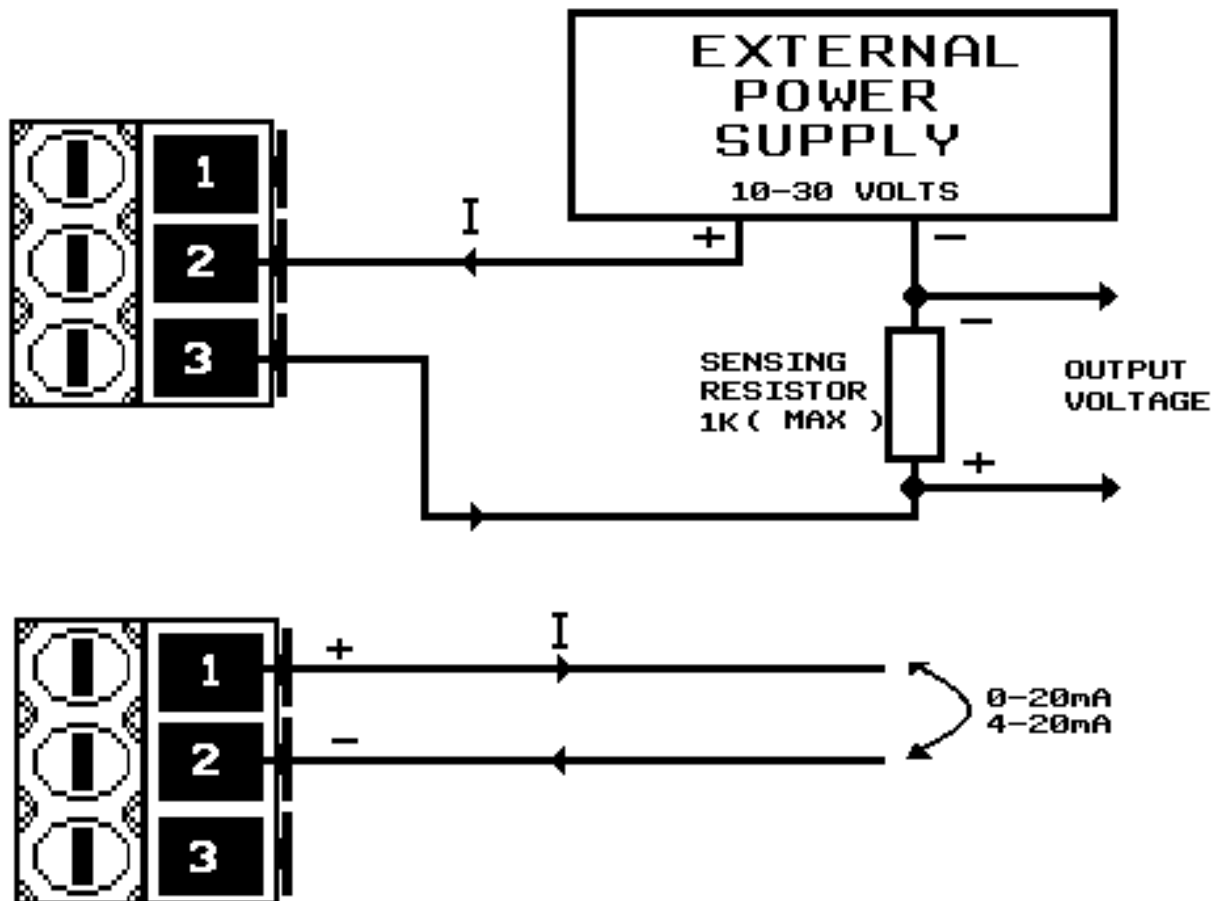



Note that connecting directly across pins 1 & 3 may cause damage to the output card.

The instrument may be used as a voltage output by connecting a suitable resistor between pins 1 and 2.

For example by placing a 250 ohm resistor across pins 1 and 2, and setting the output board to 4-20mA the voltage output will produce a voltage between 1 and 5 volts.


3.4.3 Voltage Output (Bridge Excitation),option 04

There are two options. Either a programmable 2 to 20 volt output or a fixed 24 volt output. The connections for both cases are shown below.

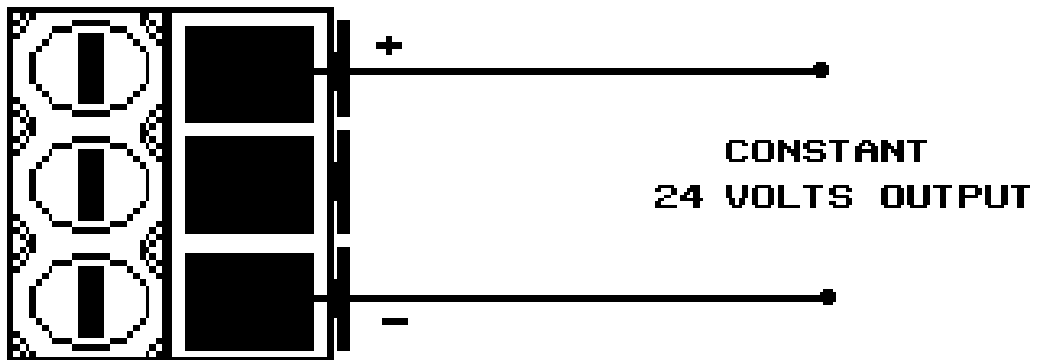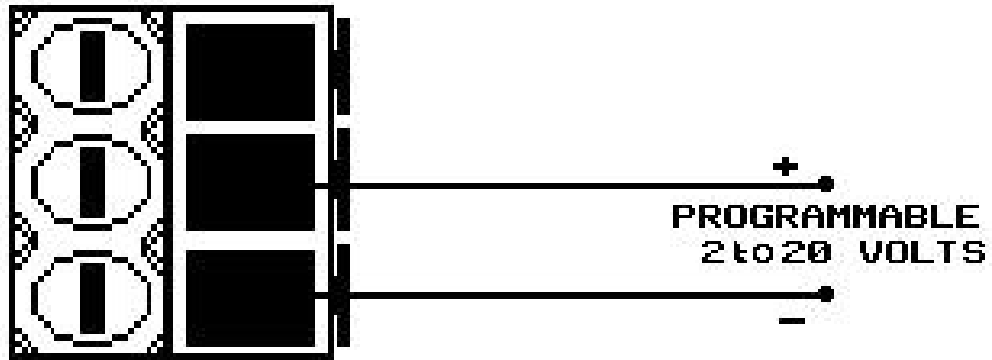


3.5 COMMS BOARD

This section explains how the instrument may be connected to a Host computer, either individually or as part of a multidrop network. Although a Personal Computer is shown as the host device, any computer capable of generating RS485 may be used. The electrical communications standard, RS485 is used instead of the commonly available RS232 as its robustness is more suitable for process instrumentation.

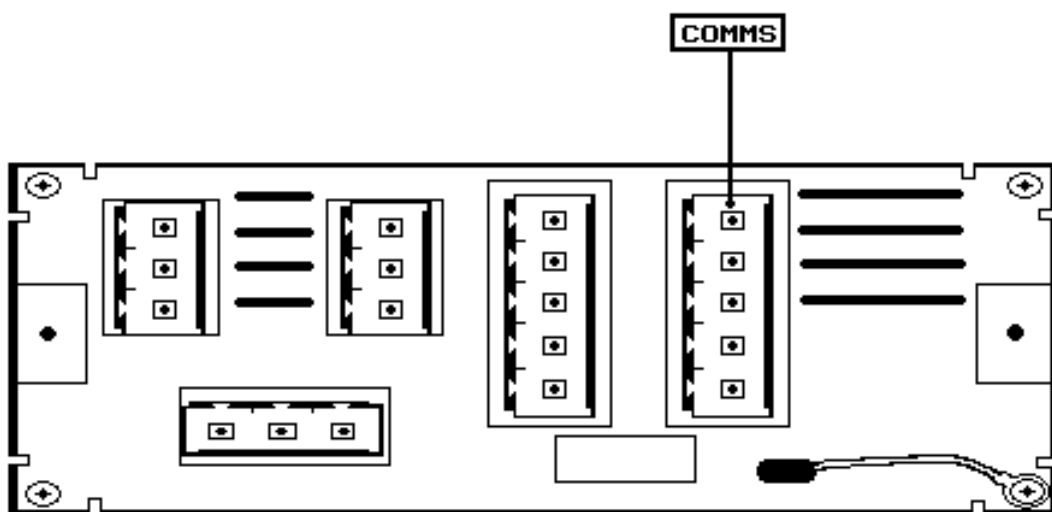


The Comms board is fitted in its own dedicated slot accessible from the rear of the instrument as identified below.

Although RS485 is the recommended interface, RS232 has been found to operate

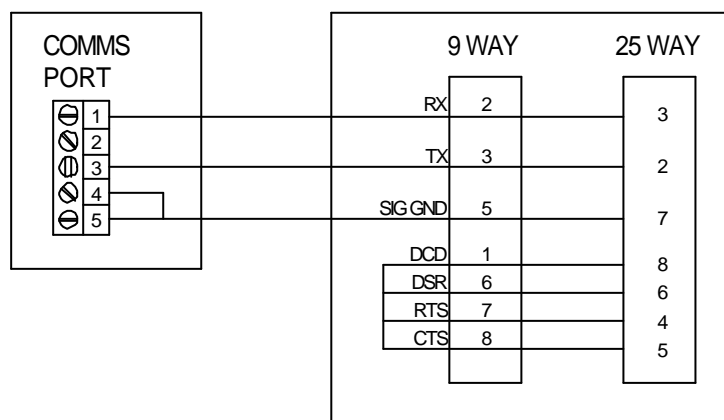


satisfactorily on some PCs over short distances. This is not a recommended arrangement, but if required for evaluation, should be wired as follows.

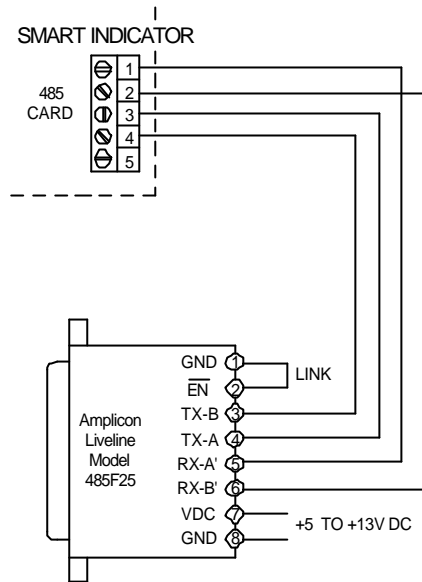


3.5.1 BASIC CONNECTIONS

The diagram below shows the basic connections between the instrument and a Host PC. The Tx and Rx signals are both differential, therefore they should be twisted wires for best operation over long distances.

For multidrop operation, the instruments should be connected as shown below.

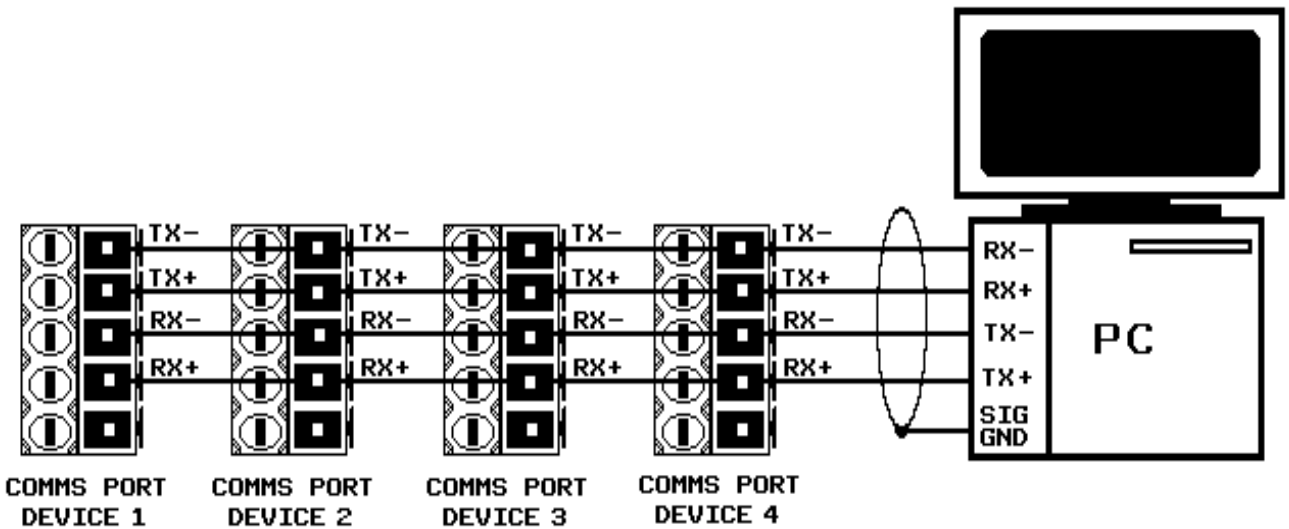

As only one instrument can transmit at a time. It is possible to connect all of the transmit lines together, this does depend upon each unit being given a unique 'address' or device number, a subject which is dealt with in the programming section of this manual. It may be necessary to screen the communications wiring if installed in a very noisy electrical environment. The screen should be grounded at one point only.

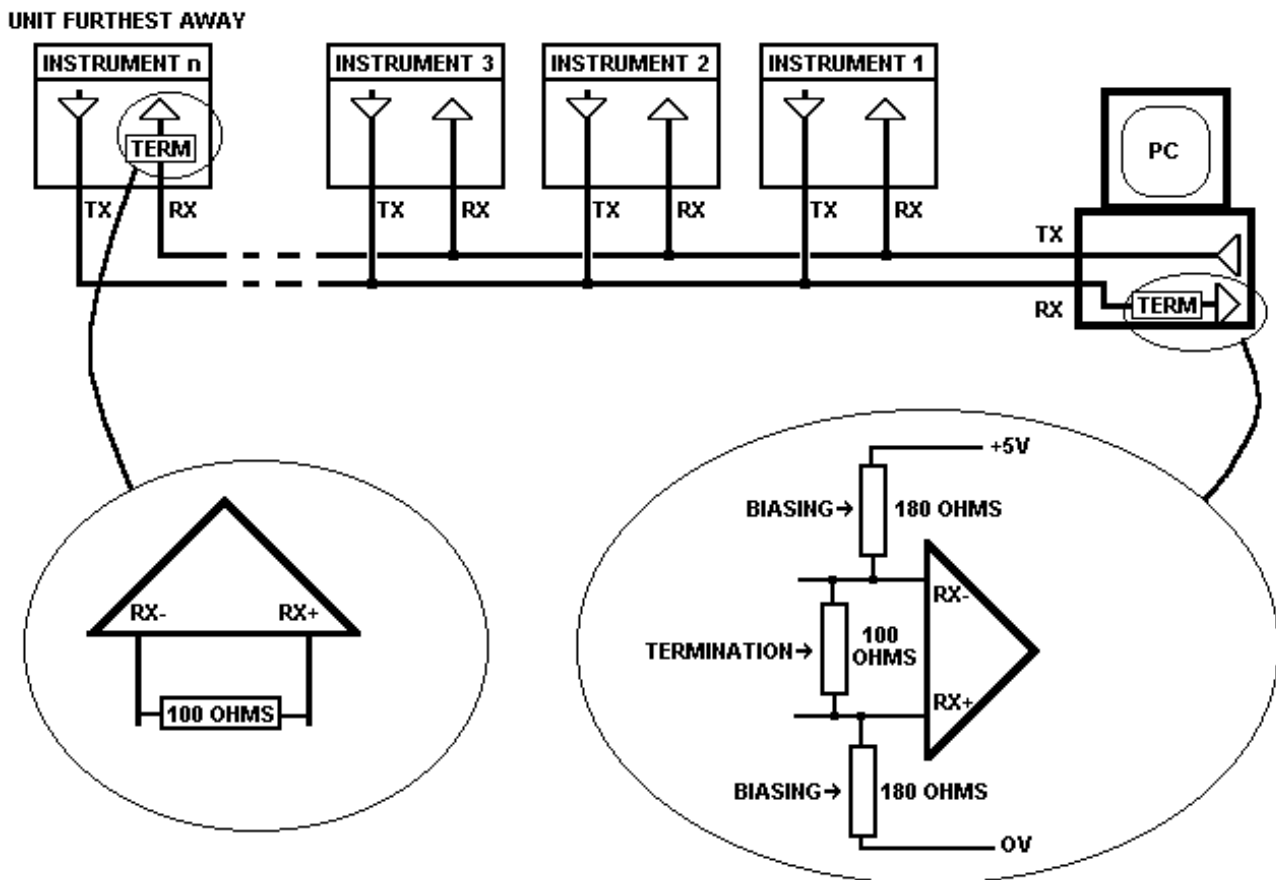

3.4.2 LINE TERMINATION


Termination resistors should be put on the receive inputs of the Host PC and the instrument furthest away from it. This is shown schematically above.

The instrument has a 100 ohm termination on the comms board which may be connected in-circuit by moving a user selectable link. The normal position, when the unit leaves the factory is with the resistor disconnected.

There is more to the termination at the Host PC receiver. The additional resistors ensure that when all units are tri-state, the differential line rest in an 'idle' state and therefore do not risk detection of spurious data due to noise or slight offsets in the differential inputs.

3.5.3 CONNECTING MORE THAN 32 UNITS

RS485 has a drive limitation of 32 receivers. If additional instruments are required (there is a logical maximum of 99 units) it is necessary to buffer the Host PC transmitter as shown in the diagram below.

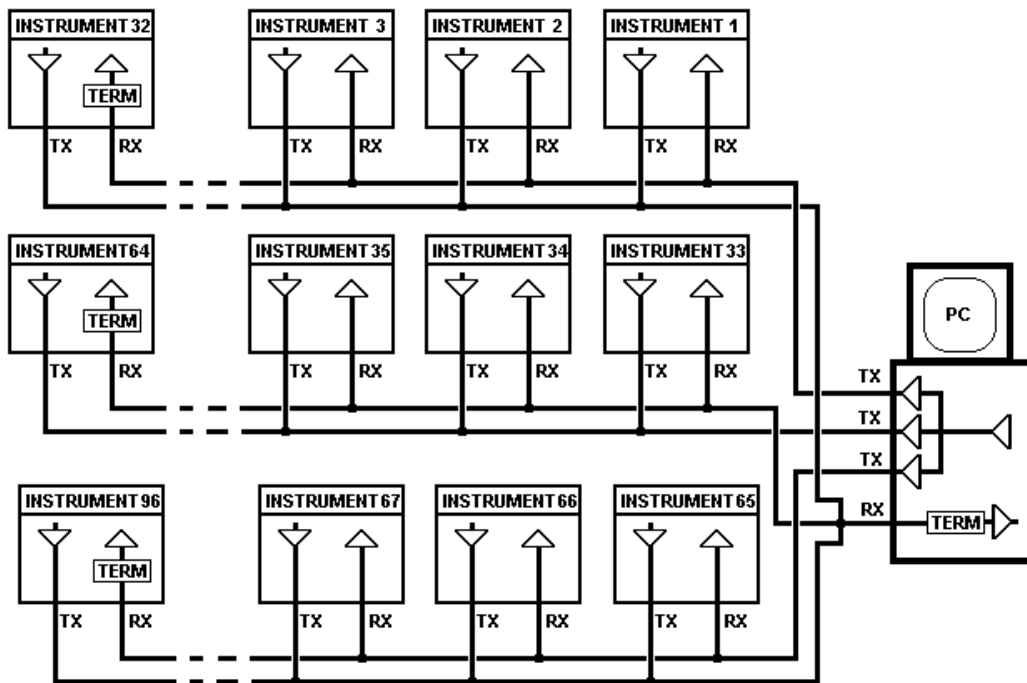

3.5.4 GROUNDING PROBLEMS


Each instrument has an internal link which connects the comms 0v to unit ground. If this causes any problems, it may be removed.

Warning Do not remove the Earth strap from the instrument as this could potentially leave the instrument in an unsafe condition.

USER GUIDE

4.0 PROGRAMMING THE INSTRUMENT

The unit is a microprocessor based instrument which enables it to satisfy a wide variety of applications through re-programming. The diagram below shows schematically, the operation of the instrument.

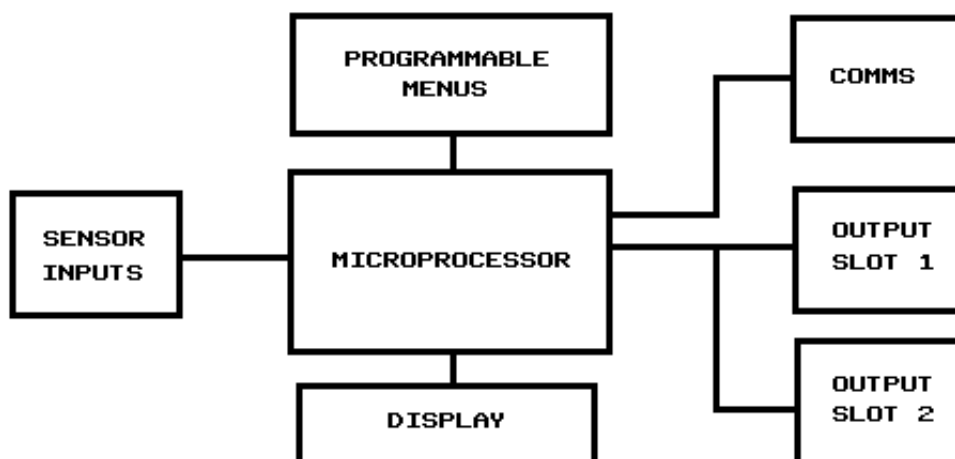

The programming of the instrument is central to its operation, effecting the way the inputs are processed, how the outputs are handled and what is displayed.

This section is divided into two parts, the first is a tutorial guide to show how to use the programming menus, the second documents the complete menu contents.

4.1 PROGRAMMING TUTORIAL GUIDE

Before starting with the Tutorial, it is useful to understand that the unit has three operating modes. These are :-

DISPLAY PROCESS VARIABLE MODE

MENU MODE

EDIT MODE

THE DISPLAY PROCESS VARIABLE MODE is the principal mode of operation. From here, the Process Variable is displayed and all other modes are accessed. The unit will always time-out back to this mode from any other mode of operation.

THE MENU MODE gives the user access to the programmable parameters within the unit. It is called a Menu Mode because the parameters are arranged in lists according to their type.

THE EDIT MODE is entered into from the Menu Mode and allows the user to inspect or modify a parameter value.


4.1.1 KEY DEFINITIONS

All programming is done using the three front panel keys. How these keys are used to program the instrument is shown in this tutorial. The functions of the keys are summarised as follows. The black symbols indicate the keys to press. Shaded keys indicate that the keys should be pressed simultaneously.


			CYCLE
			SHIFT
			INC
			ESCAPE
			ENTER
			CLEAR

4.1.2 GETTING INTO MENU MODE

The Menu mode is accessed from the Display PV mode by pressing the following sequence of keys.

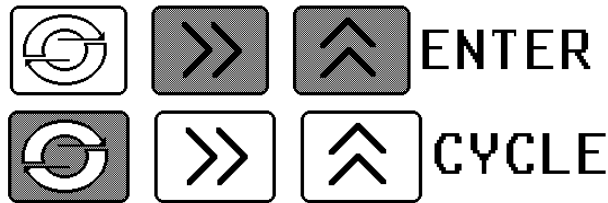

The display will now show SETPt. In order to understand what this means, the following diagram shows where we are within the basic or Root menu structure.

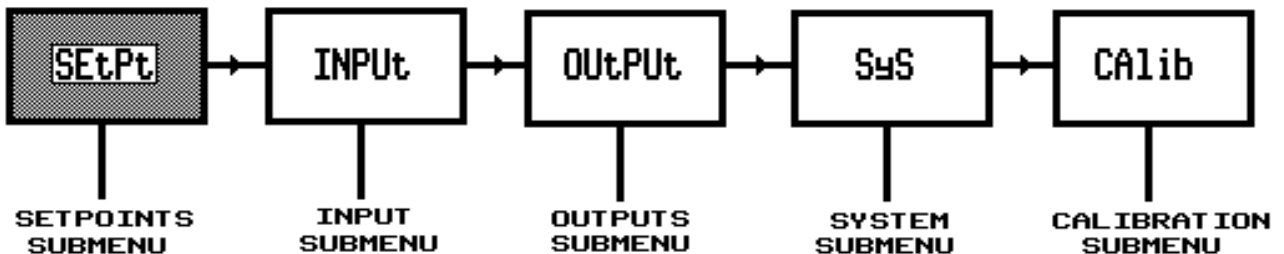

4.1.2.1 MOVING AROUND THE MENU

We can browse through the other items in the Root menu by pressing



Subsequent presses of Cycle moves the menu position from right to left on the previous diagram of the root menu. Notice that after reaching CALIB, the menu position wraps around to the start. This principle of menu operation is applied throughout the system.

4.1.2.2 GETTING INTO A SUBMENU

Up to now we have simply moved within the Root menu, in order to get into a submenu, we must first cycle around the Root menu until the required submenu is displayed.


For the purposes of this tutorial press the CYCLE key until InPut is displayed.



In order to get into the INPUT menu simply press the SHIFT key.



SENsOr will now be displayed; we are now in the Input submenu. The diagram below shows our position in relation to other items in the menu.

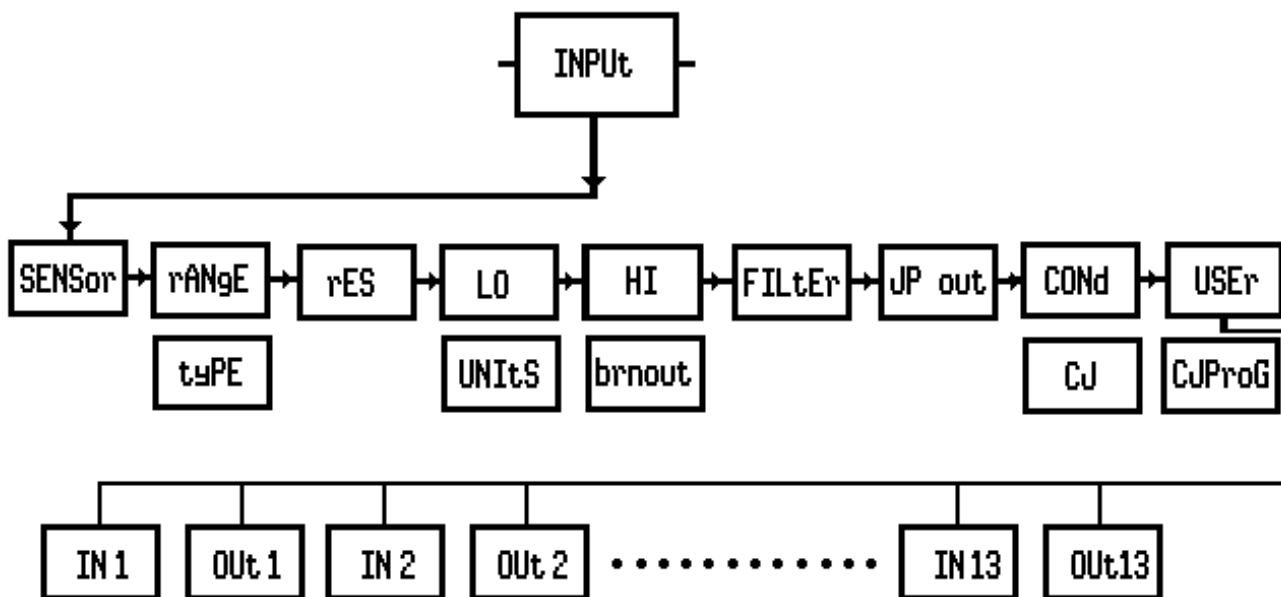

As before, pressing the CYCLE moves the menu position from left to right, wrapping around at the end. Do not worry if the contents of the menu as shown above is not exactly as you find; the unit alters items in the menu list depending upon settings made.

4.1.3 EDITING A PARAMETER

Although the items displayed in the menu can either be submenus or parameters, most of the items in the Inputs menu are parameters. This means that they can be edited.

Press the CYCLE key until **SENSor** is displayed,



and then press SHIFT.




We are now in EDIT mode. This mode is indicated by a flashing display. The display shows the contents of the parameter being edited. The flashing entry is most likely to be **currnt**. This means that the Input sensor type was previously set to monitor current inputs.

This item is changed by pressing the INC key.



The choice of options available will be found to be as follows:-

INCrement the edit options around until **Volts** is displayed flashing.

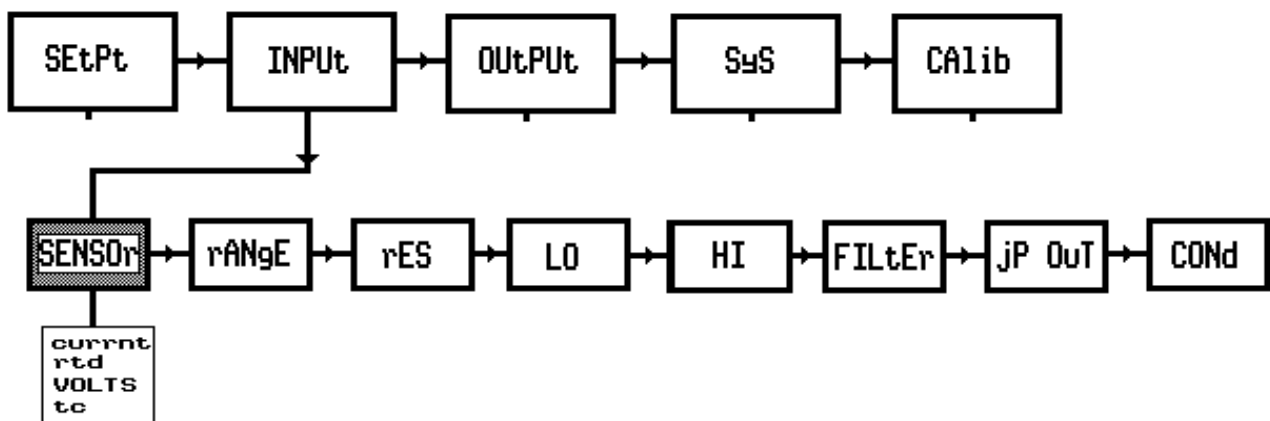


Note that whilst the display is flashing, the option on the display has not been saved to memory.

To select an option, the ENTER key sequence is used.

Now press ENTER.

 The display will be seen to stop flashing momentarily before returning to Menu mode. Instead of returning back to the **SENSor** entry, **rANgE** will now be displayed. The system has automatically stepped on to the next entry to speed the process of programming.



This method of editing parameters is repeated broadly throughout the menu structure, with the exception of programming number fields which will be dealt with next.

The method of editing a field is a bit different, though as easy as for any other entry. As before, we will see it through an example.

Cycle around the Inputs menu until **Hi** is displayed.

This is the engineering high range value, although its function is unimportant in the tutorial, it simply provides a numeric field to edit.



As before pressing SHIFT takes us into the edit mode.

The value on the display will have its most significant digit flashing and represents the value previously entered for the engineering units high range.



As before, the INC key modifies the editable value, but this time, this will only be the digit flashing. This digit is said to be under the edit cursor.



To move the edit cursor, press the SHIFT key.

The edit cursor moves one digit to the right. If the SHIFT key is repeatedly pressed, the edit cursor will be seen to wrap around to the most significant digit once more.



Therefore it can be seen how a number may be programmed in this field by selective use of the INC and SHIFT keys. We could enter the edited value as done in the previous example, but for the purposes of this tutorial we shall abandon the edit.

This is done using the ESCAPE key sequence.



Pressing this returns us to the MENU mode, showing **FiltEr**, the next item in the Input menu.

We could go on and program other items within this or other menus using the same principles as we have done in the previous examples. Instead, we shall return to the Root menu, and then back to the DISPLAY PV mode.

4.1.4 RETURNING FROM SUBMENUS

It has been shown that the method of getting into a submenu is pressing the SHIFT key on a submenu item. The reverse operation is to press the ESCAPE key.

This may be done anywhere in a menu. Pressing the ESCAPE key from our current position in the Inputs menu takes us back to the Root menu.



OUtPUt will now be displayed, as the menu position has automatically stepped on to the menu item.


The Root menu, as its name suggests is not a submenu. Pressing the ESCAPE key sequence whilst in the Root menu will take the user out of MENU mode and into the DISPLAY PV mode. Thus the monitored process variable will be shown on the display.

Note that escaping to DISPLAY PV mode saves all programmed data to non-volatile memory, retaining it during switch off.

4.2 THE MENUS

The previous section explained how to get into program mode, to move around the menus and how to edit. This section details the contents of the menus and explains how to program the unit for your own particular application.


As described before, Program mode is entered by pressing ENTER then CYCLE from the process variable display. This takes the system into the Root menu. The Root menu is divided into five submenus: SETPOINTS, INPUTS, OUTPUTS, SYSTEM and CALIBRATION.

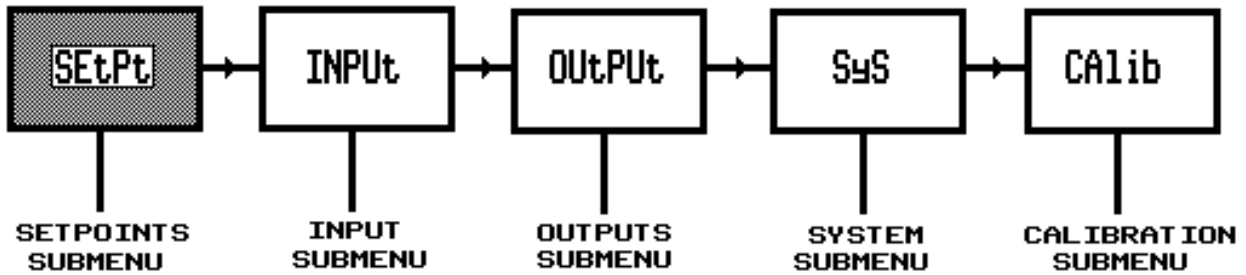

Note: If there are analog output options fitted (Current output or Voltage output) in both output slot positions, there will not be any setpoints available and the SETPOINT submenu will be removed from the Root menu.

4.2.1 The SEtP (SETPOINTS) submenu

This submenu is provided as a quick means of modifying setpoints. Only the setpoint values are available to be changed. The availability of the setpoints depends upon the output options fitted. The logic directing this is discussed in detail in section 4.2.3, under the Output submenu section. With this in mind, it should be taken that any or all of the setpoints (1 to 4) could be unavailable and therefore removed from the submenu. If all setpoints are unavailable then the entire submenu is occulted. The submenu is represented as follows:-

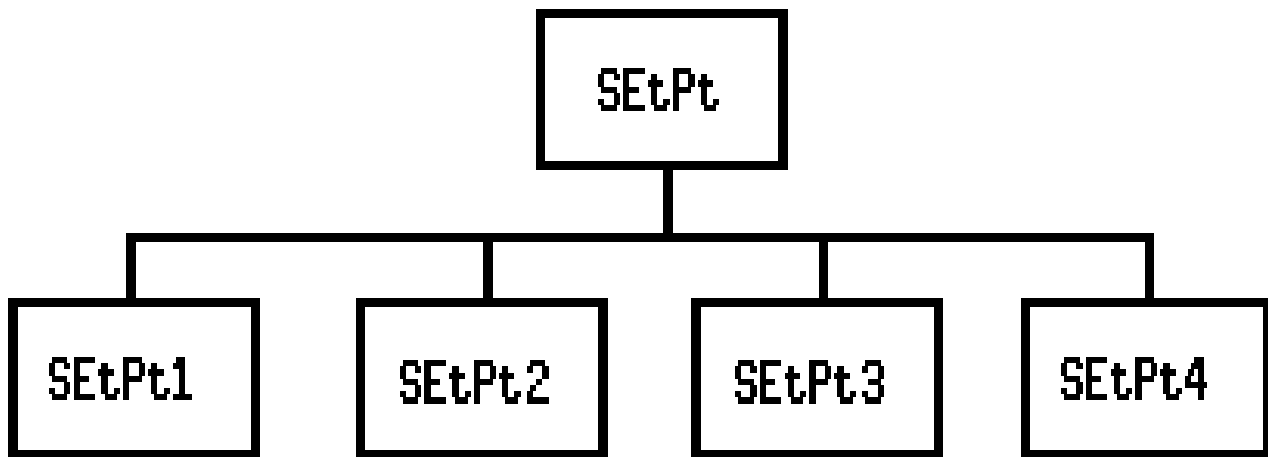


In each case, the editable value is the setpoint in engineering units. The number of decimal places for this field is defined by **rES** in the Inputs menu see 4.2.2.5.

The default value for all setpoints is **zero**.

4.2.2 The INPUt submenu

This submenu is used to program all the characteristics of the input sensor and any signal conditioning that may be required. The selection of an option in the list may effect items further down. Therefore, during programming, the user should start at the top of the menu and work down, to avoid setting an option which may later become obsolete. For instance if a temperature sensor is selected, then there is no requirement to select the engineering range.

The structure of the Input menu is represented in the following diagram.

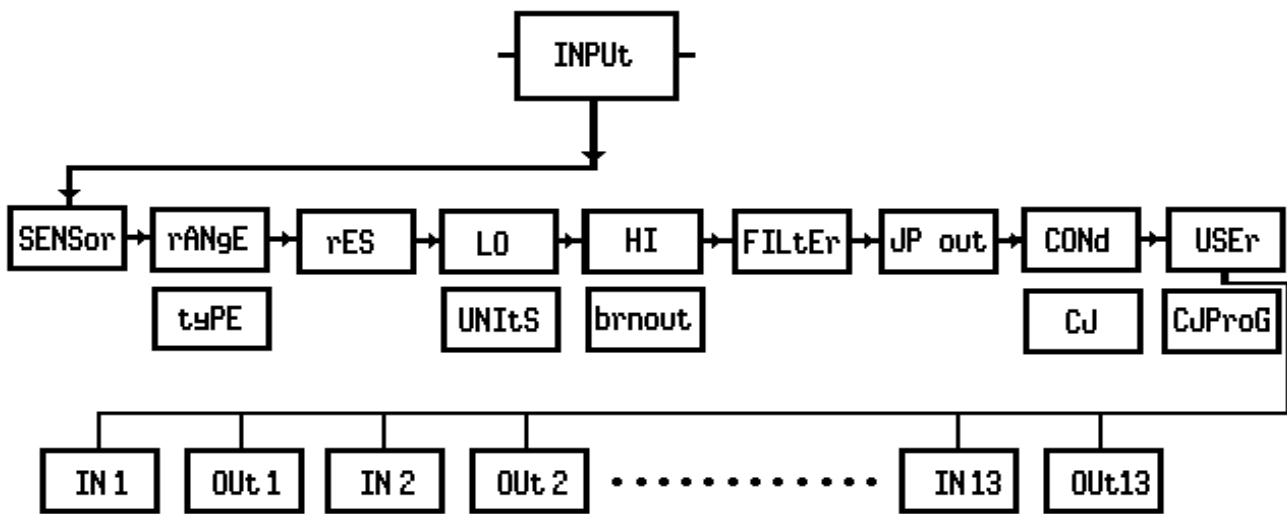

4.2.2.1 SENSOR (Type of sensor connected)

This parameter defines the type of electrical sensor connected.

There are four options.

currnt	(Current inputs, internally generated loop)
tc	(Thermocouple input)
VoltS	(Voltage input, including millivolts)
rtd	(Resistance thermometer)

default setting: **currnt**

4.2.2.2 rANgE (electrical range for voltage or current inputs)

This Range parameters will only be available if the sensor option has been set to either current or voltage. The options available will vary between these two settings.

4.2.2.2.1 rANgE [SENSOR=currnt]

If the sensor type has been set to current, the following options are available.

4-20	(Internally generated 4-20mA)
0-20	(Internally generated 0-20mA)
0-10	(Internally generated 0-10mA)

default setting: **4-20**.

4.2.2.2.2 rANgE [SENSOR=VOLtS]

If the sensor type has been set to voltage, the following options are available.

0.100	(100mV on the millivolt input)
1	(1 Volt on the voltage input)
1-5	(1 to 5 volts on the voltage input)
10	(10 volts on the voltage input)

default setting: **0.100**

4.2.2.3 SENSOr (Type of thermocouple)

This menu option is only available if a thermocouple has been selected as sensor type. This option allows the user to set the thermocouple type. The options are:-

- CA** (K type thermocouple)
- J** (J type thermocouple)
- t** (T type thermocouple)
- r** (R type thermocouple)
- S** (S type thermocouple)
- E** (E type thermocouple)
- F** (F type thermocouple)
- n** (N type thermocouple)
- b** (B type thermocouple)

Default setting: **CA**.

4.2.2.4 UnitS (Temperature sensor units)

This item is only available if a temperature sensor has been selected, that is, either a thermocouple or an RTD. The two options are:-

- dEg C** (Degrees Centigrade)
- dEg F** (Degrees Fahrenheit)

Switching between these two has the effect of changing the engineering range between Degrees centegrade and Degrees Fahrenheit.

Default setting: **dEg C**.

4.2.2.5. rES (Engineering units display resolution)

This option defines the number of decimal places displayed for the process variable. There are four options:

8888	No places of decimal (integer value)
888.8	One place of decimal
88.88	Two places of decimal
8.888	Three places of decimal

Note that the Low and High engineering range adopts this resolution, as do the Rate setpoints, so consideration needs to be given to appropriate resolution for the required application. It is advised that the number of decimal places is set before the engineering range is programmed. There are five digits allocated for all engineering values, so the number of significant figures must fit within this field.

If there are more significant digits than can be displayed, the number will be right justified.

default setting: **888.8** (One place of decimal)

4.2.2.6 CJ (Cold Junction Select)

This is only shown if thermocouple has been selected as input type. This entry provides choice of cold junction compensation between a internal thermistor measuring the actual input terminal temperature or a set programmable temperature.

iNtErN	(Internally measured input terminal temperature)
PrOG	(Programmable Cold junction)

default setting: **iNtErN**

4.2.2.7 PrOGCJ (Programmable Cold Junction)

This is shown if CJ has been set to PrOG and contains the value with which the thermocouple calculation will use as cold junction. The value is in engineering units; Degrees C or Degrees F.

Default setting: **0.0**


4.2.2.8 LO and HI (Rate Engineering range)

LO and HI are used to define the engineering range for Rate.

This range applies to low and high electrical inputs being monitored by the unit. For example, if the electrical input has been set to Volts, on the 100mV range, and it is required that the Rate value be 0.0 at 0mV input and read 50.0 at 100mV, LO and HI are set to the following values:

$$LO = 0.0 \quad HI = 50.0$$

The display value will increase linearly from 0.0 to 50.0 as the millivolts increase from

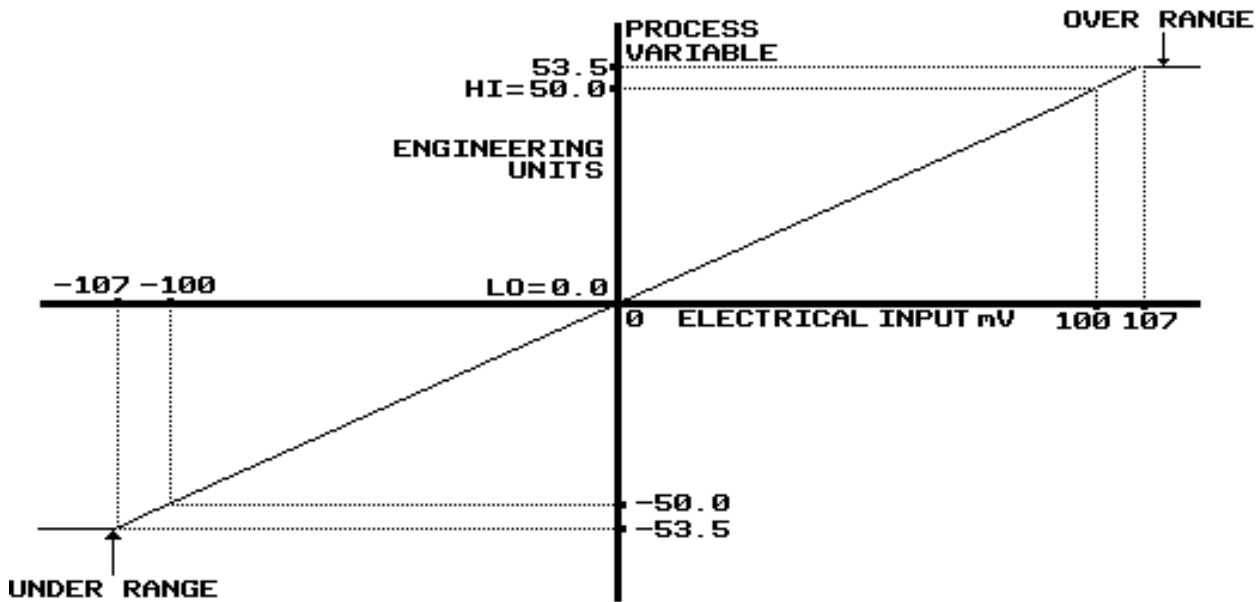

0 to 100. Similarly as the millivolts reduce from 0 to -100 the Rate falls from 0.0 to -50.0. This relationship is shown on the following diagram.

On all ranges, a 7% overhead is allowed on the scale before the unit detects an out-of-range signal. If the input signal is out of range at the positive end of the scale, **OVER** is displayed instead of the Process Variable. If out-of-range at the negative end, **Under** is displayed.

Note that it is quite acceptable to have a reverse acting engineering range, where LO will be greater than HI. This method of setting the engineering range may also be used for removing gain or offset errors from the system being measured.

Note that the maximum value that may be entered is **64000**.

default setting: **LO: 0.0; HI: 100.0**

4.2.2.9 brnout (Temperature Sensor burnout)

Burnout enables the user to select up-scale (Hi) or down-scale (Lo) burnout condition. This is available for thermocouple or RTD sensors only, and effects the operation of all alarms and output options. When a temperature sensor is detected to be open circuit, the burnout comes into operation, forcing the Process Variable up-scale or down-scale. **burn** is shown on the display in place of the Process Variable display.

The options are:

Hi (High scale burnout)

Lo (Low scale burnout)

default setting: **Hi**

The factors which can cause a burnout error are any of the following :-

Thermocouple open circuit


Cold junction thermistor temperature out of bounds

Cold junction thermistor electrical fault

Any RTD wire becoming open circuit

4.2.2.10 FilteR (Input filtering or smoothing)

If an input is particularly noisy, it is possible to filter out noise using this programmable feature. There are eight filter values which may be selected. These filter

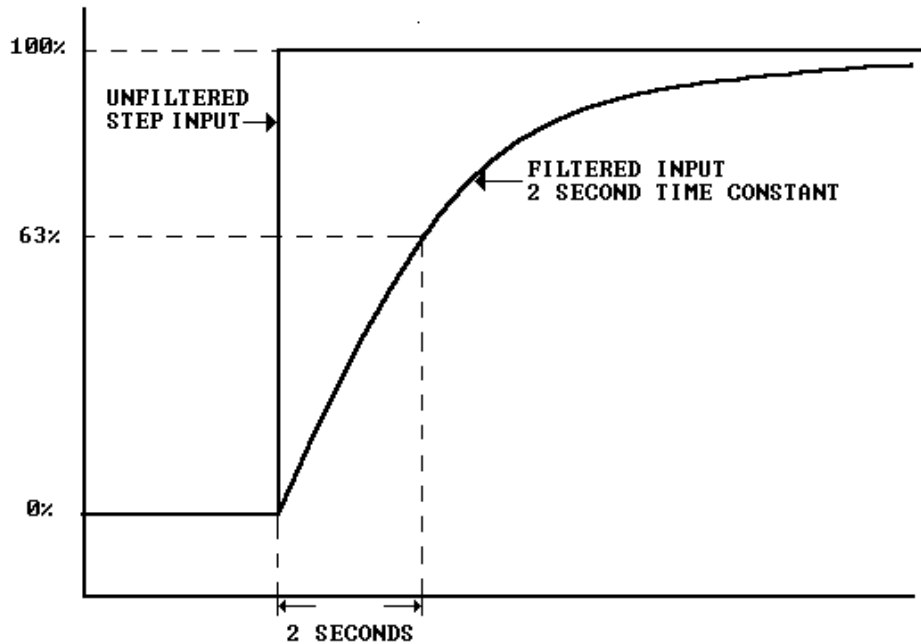

factors represent the time it would take a step change in an input value to reach approximately 63% of its final value.

The following filter factors are available:


nonE	(Filtering switched off)
0.5 SEC	(Filter Factor 0.5 seconds)
1 SEC	(Filter Factor 1 second)
2 SEC	(Filter Factor 2 seconds)
4 SEC	(Filter Factor 4 seconds)
8 SEC	(Filter Factor 8 seconds)
16 SEC	(Filter Factor 16 seconds)

32 SEC (Filter Factor 32 seconds)

default setting: **2 SEC** Also see jump out in section 4.2.2.11

4.2.2.11 JP out (Filter jump out)

This sets the change in input value, expressed as a percentage of full scale, below which the filter operates and above which the filter is inoperable. This enables the indicator to respond quickly to large changes, whilst filtering smaller noisy signals. The diagram below shows the operation of the Jumpout on a filtered input. Each of

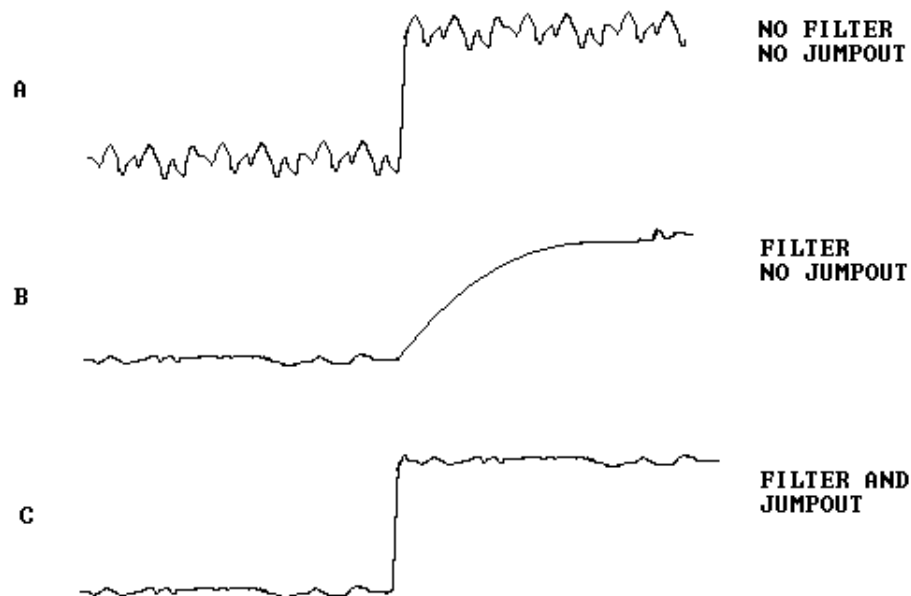

the waveforms is based upon the same raw input 'A'. By setting the Jumpout band just greater than the noise level; the filtering is switched off for any change in actual signal. In this way, a compromise between heavy filtering and signal response can be reached.


The following options are available:

- nonE** (No jump out, filter in operation all of the time)
- 1 PEr** (Jump out band, 1% of engineering range)
- 5 PEr** (Jump out band, 5% of engineering range)

10 PEr (Jump out band, 10% of engineering range)

Note that 1% of engineering range for thermocouples is 20 degrees and for RTDs is 10 degrees.

default setting: **1 PEr**

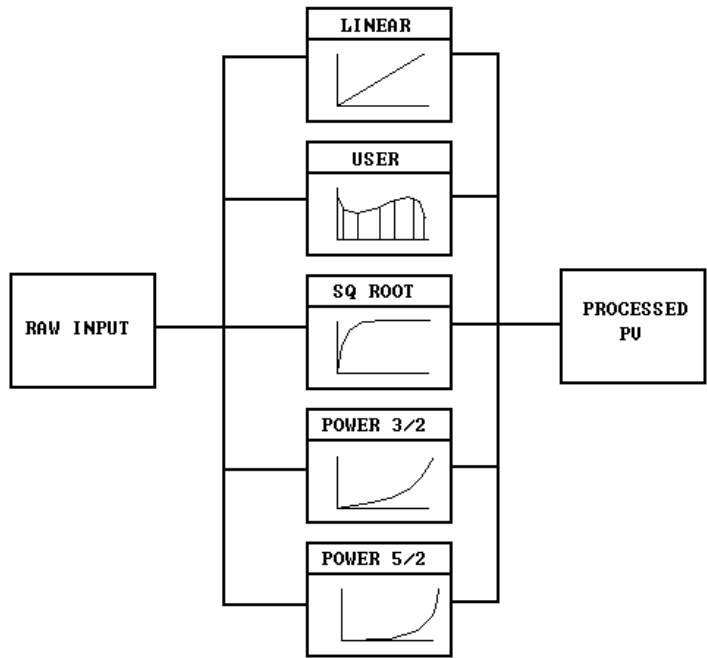

4.2.2.12 Cond (Input conditioning for Current and Voltage ranges)

This feature is available for Voltage and Current inputs only, and enables the user to specify one of the following input characteristics. This characteristic is then applied to the Raw input.

The five options are:


- LinEAr** (Linear relationship, no conditioning)
- USEr** (User defined characteristic. See 4.2.2.13)
- S root** (Square root Law. See 4.2.2.14)
- root 32** (Power 3/2. See 4.2.2.15)

root 52 (Power 5/2. See 4.2.2.15)

default setting: LinEAr

4.2.2.13 User linearisation

OUTPUT SCALED IN ENGINEERING UNITS

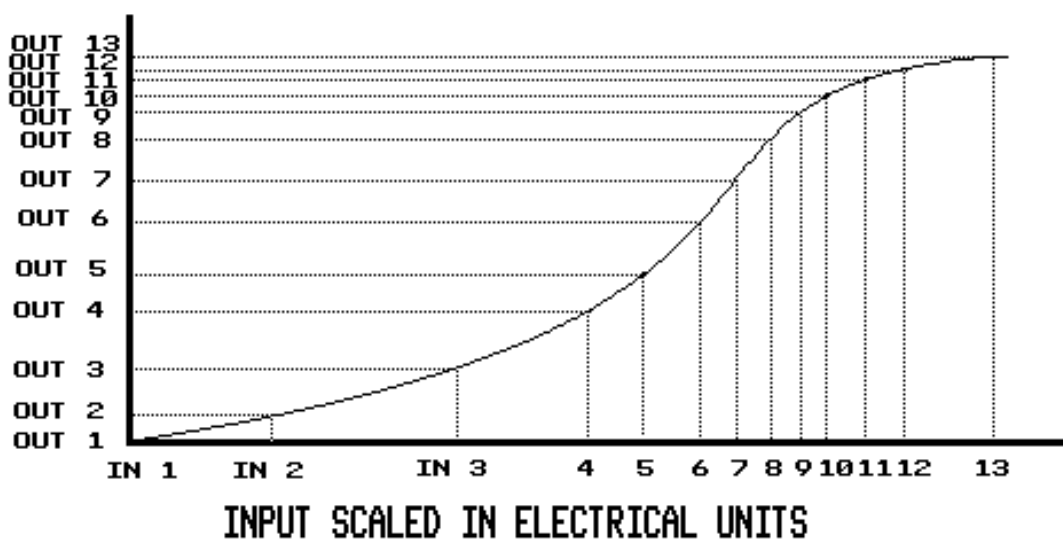


Selection of this option for **Cond** allows access to the User submenu. Within this menu, thirteen points may be programmed to relate electrical input to engineering value. These points are represented by IN and OUT entries within the menu, where IN are the electrical inputs and OUT the resultant engineering value. An example of a user linearisation utilising all thirteen points is shown below.

There are a few rules which should be followed when using this facility.

- a) The HI and LO values for engineering range should have been set before any entry of data. Any engineering values entered should lie between HI and LO.
- b) The entries for the electrical inputs should progressively increase. There is no such restriction on the engineering units.
- c) If not all thirteen points are used, it is necessary to reproduce the values in the last entry in entry 13.


- d) Any electrical input falling outside the bounds specified by the table will be regarded as out of bounds and under-range or over-range will be indicated instead of the Process Variable. If a small amount of valid signal over/under range is required, this must be built into the linearisation table.

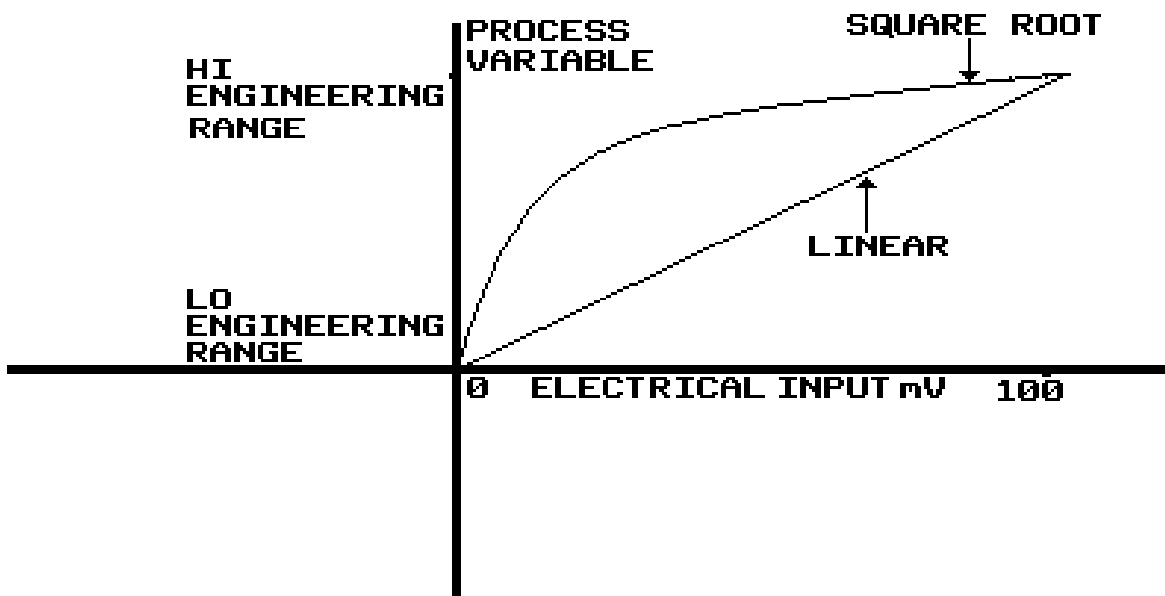

4.2.2.14 Square Root.

When the Square root characteristic has been selected, the engineering range will still increase from LO to HI as the electrical input is increased, but the response will be a square root rather than Linear, see the diagram below.


The bottom 1% of the range is made to reflect equivalent linear value (times 10) to avoid the near infinite gradient at zero. The Process Variable is set to Low engineering range for all negative electrical inputs.

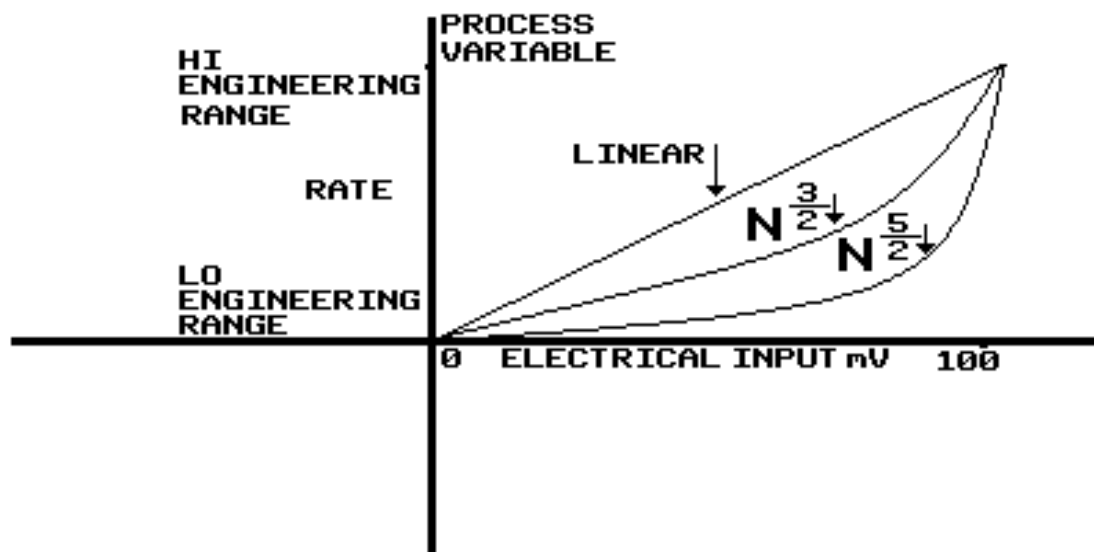

4.2.2.15 Power 3/2, 5/2 law


The root $3/2$ and root $5/2$ characteristics are for specific applications. For example, calculation of Flow Rate from rectangular and 'V' notch weirs require these non-linear corrections. The operation of the characteristic is the same as for square root except that the bottom 1% is not made linear, the response is as follows.

4.2.3 OUTPUT SUBMENU

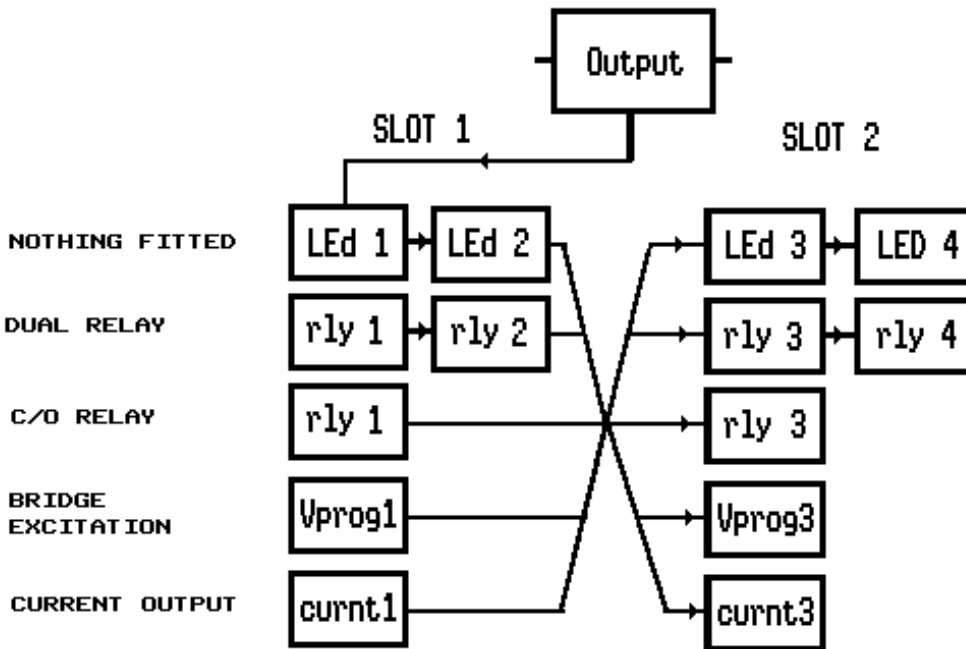

There are two types of outputs, namely digital (relays) or analogue, which are available as options. Each of the two output slots can contain either of these options. The processor identifies which options are present on power-up and invokes the appropriate programming menus accordingly.

Entry into the outputs menu presents a list of submenus relating to the output cards fitted. The conditions determining the availability of submenus is summarised below.

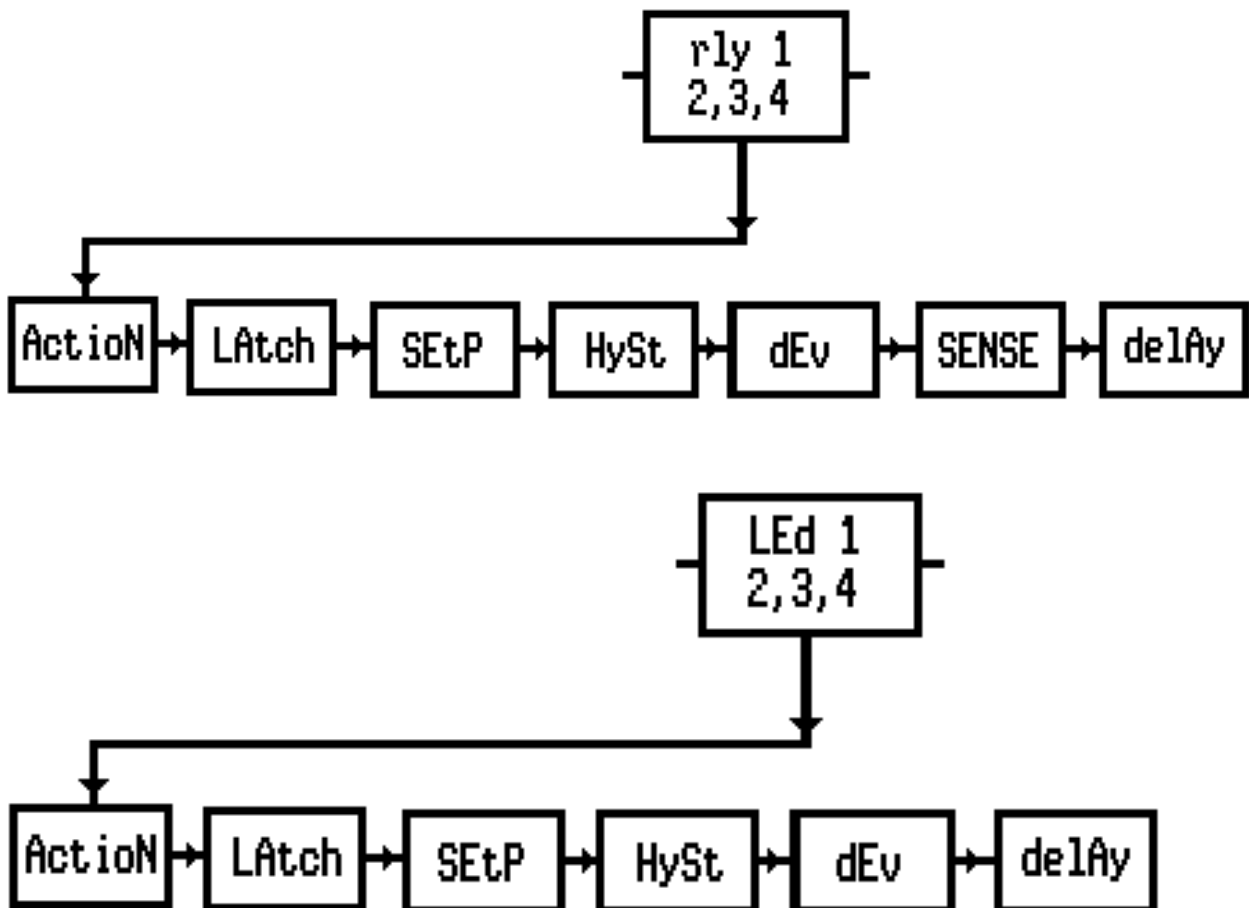

4.2.3.1 Relay alarms and LED alarms submenus

The submenus for the Relay and LED alarms are shown below.

Note that the only difference in content between them, is there is no SENSE option in the LED submenu. This is because the SENSE option relates to the activation of a

relay and is therefore irrelevant if no relay is fitted. Both types of alarms activate a discrete LED on the front panel of the instrument if triggered, although this is all a LED alarm does, hence its name.

4.2.3.1.1 ActIOn (Alarm action)

This programs how the alarm is to operate. The options are:

- oFF** (Alarm inactive)
- Lo** (Low alarm. Triggers when PV goes below setpoint)
- Hi** (High alarm. Triggers when PV goes above setpoint)
- dEv** (Deviation alarm. See Deviation band 4.2.3.1.5)

Default setting: **oFF**

4.2.3.1.2 LAtch (Latch enable for an alarm)

The options for this are:

- FALSE** (Latch disabled)
 - trUE** (Latch enabled)
-    **CLEAR**

When Latch is enabled, the alarm remains set once triggered, even when the Process Variable has returned to a non alarm condition. A non-latching alarm is self-resetting when the alarm condition is removed.

Pressing CLEAR, from the Display Process Variable mode, clears a latched alarm if not in an alarm state.


Default setting:**FALSE**

4.2.3.1.3 SEtP (Alarm Setpoint)

This entry allows the user to program the setpoint value. This is entered in engineering units. This can also be set from the SEtP menu (see 4.2.1) which provides a quick

means of adjusting setpoints whilst running.

Default setting: **0.0**

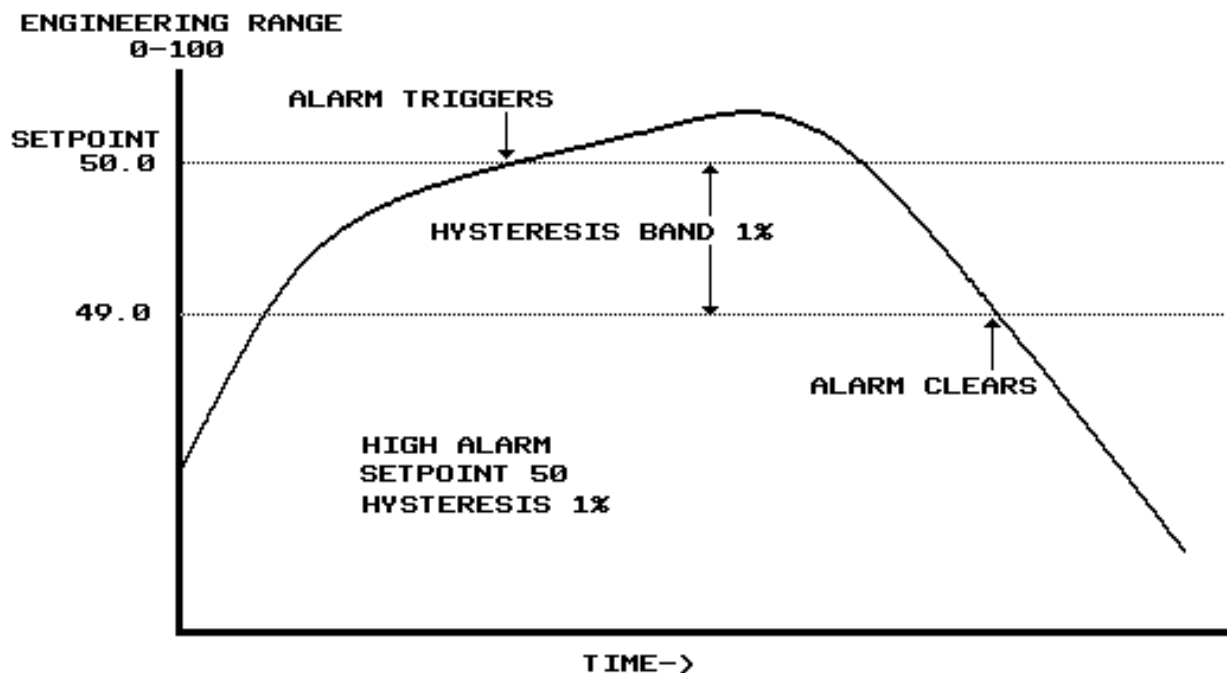


4.2.3.1.4 HySt (Alarm hysteresis or dead band)

This enables the hysteresis or dead-band to be programmed. This is the difference between the points at which the alarm triggers and releases and is expressed as a percentage of engineering range. For high and low alarms, the alarm triggers exactly at setpoint and is removed at the hysteresis level away from the setpoint. See example based upon a high alarm below.

In the case of deviation alarms, the hysteresis is applied to each trigger point either side of the setpoint.

Note that for thermocouples, a 1% hysteresis band would be equal to 20 degrees Centigrade and 10 degrees Centigrade for an RTD.

default setting: 0.00

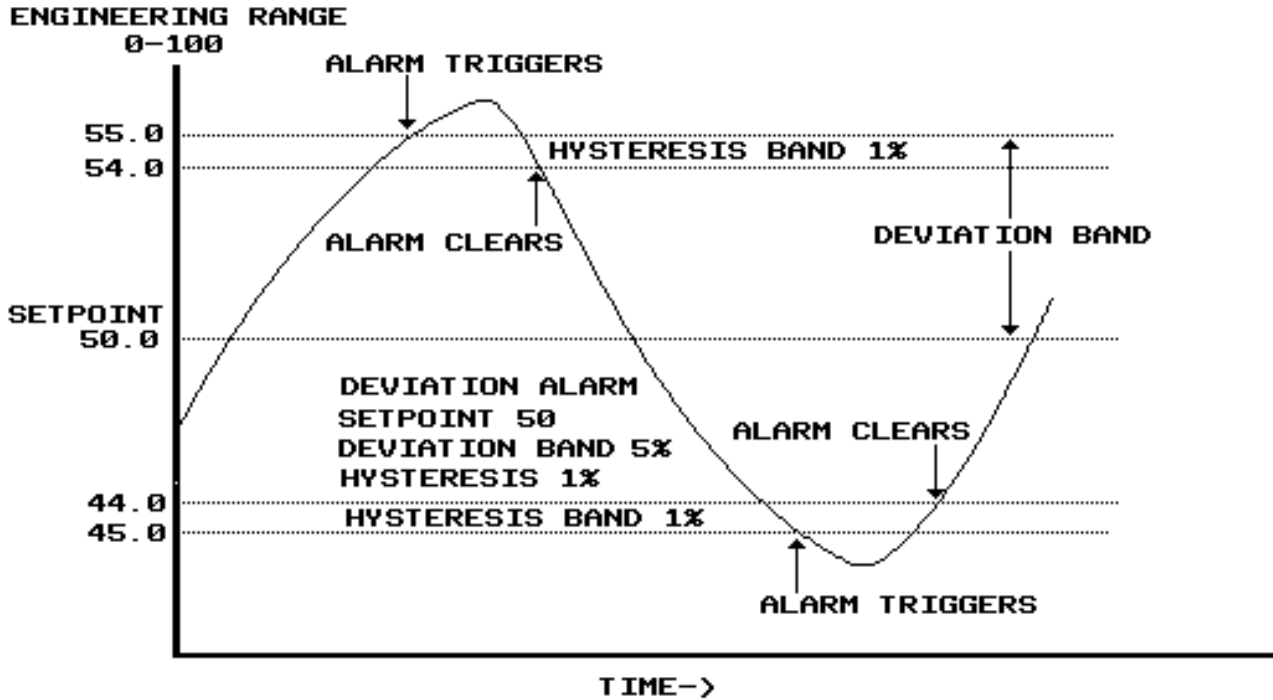

4.2.3.1.5 DEv (Deviation band)



This option will only appear if the alarm action is set for deviation, and it signifies the amount, as a percentage of the engineering range that the input variable may vary before the alarm condition is activated. This is illustrated in the example below.

The deviation alarm creates two alarm trigger points; one above and one below the setpoint. The trigger points are equally distant from the setpoint. This is known as the deviation band and is a percentage engineering range.

Each of these trigger points may be regarded as an upper and lower setpoint, and as such the operation of the hysteresis is as on individual upper and lower setpoints.

Note that 1% deviation represents 20 degrees Centegrade for a thermocouple and 10 degrees Centegrade for an RTD.

default setting: **0.00**

	ALARM OPTION	POWER OFF	POWER ON	
			NO ALARM	IN ALARM
	NON INV	1:3 CLOSED 2:3 OPEN	1:3 CLOSED 2:3 OPEN	1:3 OPEN 2:3 CLOSED
	INV	1:3 CLOSED 2:3 OPEN	1:3 OPEN 2:3 CLOSED	1:3 CLOSED 2:3 OPEN
	NON INV	1:3 CLOSED 2:3 CLOSED	1:3 CLOSED 2:3 CLOSED	1:3 OPEN 2:3 OPEN
	INV	1:3 CLOSED 2:3 CLOSED	1:3 OPEN 2:3 OPEN	1:3 CLOSED 2:3 CLOSED

4.2.3.1.6 SENSE (Invert activation of relay)

This option sets the sense of the relay, ie in the event of an alarm, is the relay to be energised or de-energised?

The options are:

noninv (energise relay on alarm, de-energise normally)

iNv (energise normally, de-energise relay on alarm)

This function is tied in with the fail safe requirements of the relay and its electrical configuration. The following summarises all options.

Default setting: **noninv**

4.2.3.1.7 dEIAy (Delay before activation of alarm)

This option allows a delay time to be programmed (in seconds) which must elapse between an alarm being detected and then indicated (and relay state changed).

The options are:

oFF (No delay time)

1 SEC (1 second delay)

2 SEC (2 second delay)

5 SEC (5 second delay)


10 SEC (10 second delay)

15 SEC (15 second delay)

20 SEC (20 second delay)

If the alarm condition is removed during the delay period and then re-applied, the delay time starts again from the time the alarm condition re-occurs.

Default setting: **OFF**

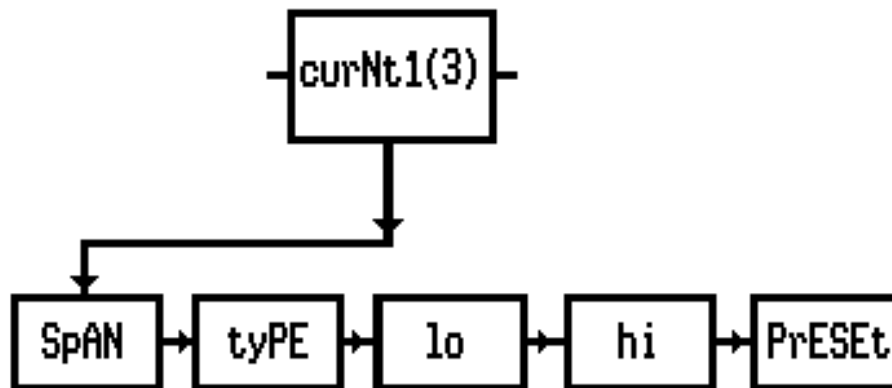

4.2.3.2 curnt1(3) CURRENT OUTPUT (RETRANSMISSION) BOARD

The current retransmission board provides a range of current output options. If fitted, the following menu will be available from the Output menu.

4.2.3.2.1 SPAN (Output current span)

Span is the current range at which the output board is to operate.

The options are:

4-20mA (Output current will vary from 4 - 20mA)

0-20mA (Output current will vary from 0 - 20mA)

0-10mA (Output current will vary from 0 - 10mA)

Default setting: **4-20**

4.2.3.2.2 tyPE (Type of output operation)

This determines the type of operation. The choices are either fixed programmable output or current retransmission based upon the process variable.

The options are:

rEtrAN (Retransmission of the input)

PrESEt (Constant preset output)

Default setting: **rEtrAN**

4.2.3.2.3 lo (low retransmission range)

This is the engineering value at which the current output will be at its minimum value (either 0 or 4mA), depending upon the span setting.

The value is entered as an engineering value.

Default setting: **0.0**







4.2.3.2.4 hi (high retransmission range)

This is the engineering value at which the current output will be at its maximum value (20mA or 10mA). See the diagram below for an example of the operation of this feature.

Note that it is acceptable for the hi range to be less than the lo; although both must be within the span of the input engineering range. Note that the current output is limited to the extremes of the current range selected.

Default setting: **100.0**

The following diagrams on the next page show the different output responses for a variety of configurations.

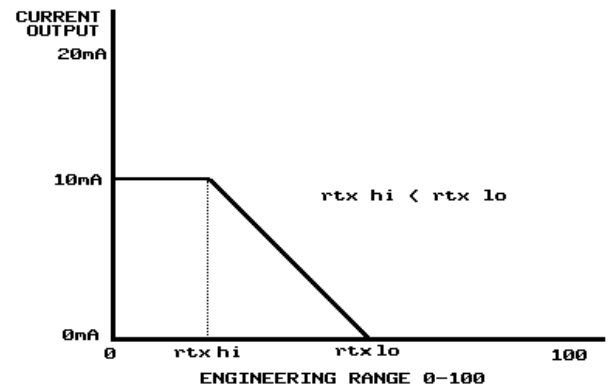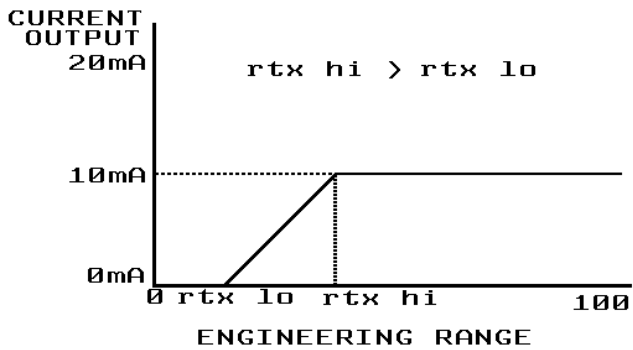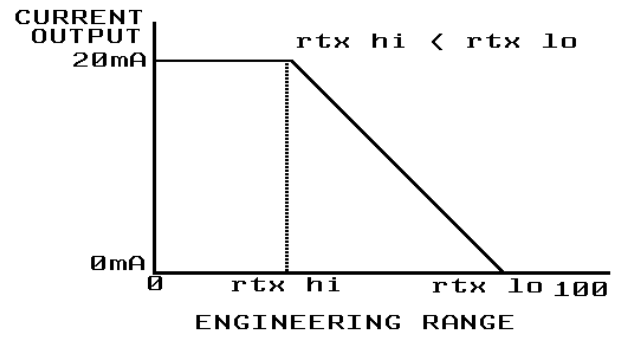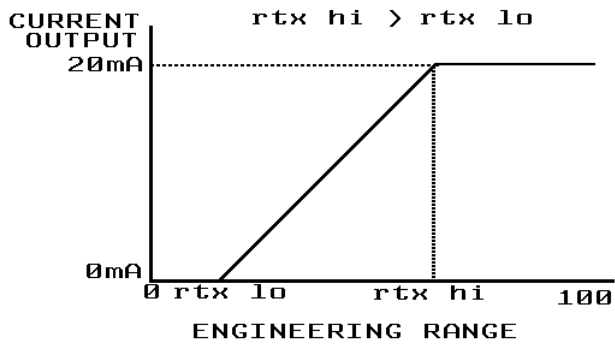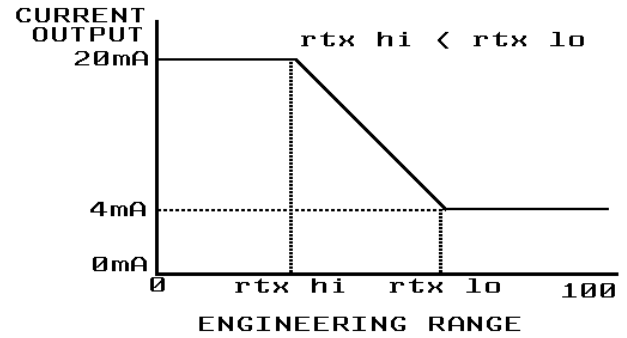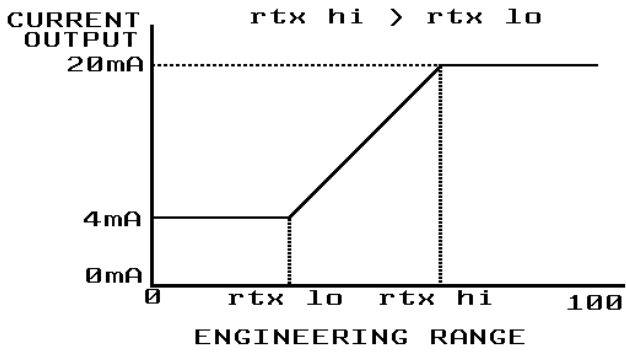

4-20mA

0-20mA

0-10mA

4.2.3.2.5 PrESEt (Preset output value)


This line is only available if **PrESEt** has been selected as the **tyPE** of operation. In this mode the current output will directly relate to the value set within this programmable option. The value entered must fall within the **hi** and **lo** range and will cause the maximum current to be output when set to the **hi** value and the minimum output current when set to the **lo** value.

4.2.3.3 Vprog1 (3) Bridge Excitation board

This menu entry is available when a bridge excitation board is fitted in either slot 1 or 2. This is used to program a fixed voltage output from the following range of options.

- 2 2 volts output
 - 2.5 2 volts output
 - 3 2 volts output
 - 3.5 2 volts output
 - 4 2 volts output
 - 4.5 2 volts output
 - 5 2 volts output
 - 6 2 volts output
 - 7 2 volts output
 - 8 2 volts output
 - 9 2 volts output
 - 10 2 volts output
 - 12 2 volts output
-

- 15 2 volts output
- 20 20 volts output

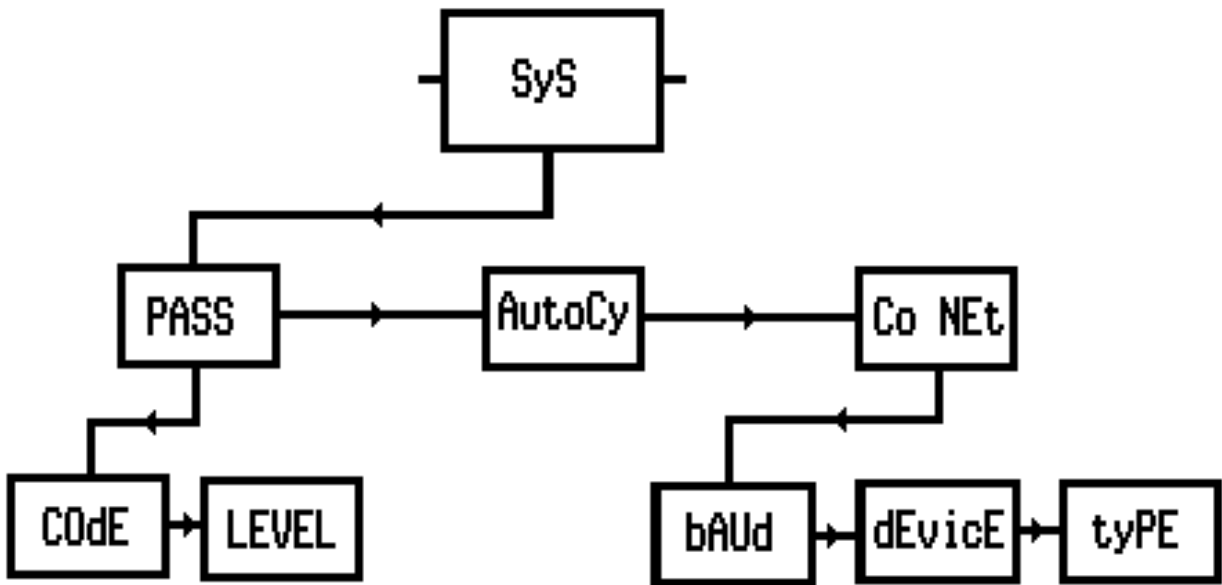

default setting: 2 Volts

4.2.4 SyS (System parameters submenu)

This submenu allows access to all of the system based parameters such as passwords and communications facilities. The system submenu is as follows:

4.2.4.1 PASS (Password submenu)

This provides access to the password submenu. The password facility provides protected access to the submenus within the root menu. The level of password protection works progressively down the menu.

This submenu is itself protected with a password. The message **ENtEr, PASS** will be displayed before displaying the password template. This will be shown as four zeros with the leading zero flashing. This may be edited as an ordinary numeric field. The password should be entered. Pressing ENTER with the correct password takes the user into the submenu shown above. An incorrect password displays **ACCESS, dEniEd** before returning to the point of entry.

4.2.4.1.1 CodE (Password code)

This entry allows the user to modify the password code. The current password is shown as an editable numeric entry. Passwords are four digits long and can range from 0000 to 9999.

default setting: **4000**

4.2.4.1.2 LEvEL (Password start level)

The password level may be set up to start from any of the following levels.


SEtPt	(The passwords apply to all submenus)
INPUt	(Passwords start from in Input submenu)
OUtPUt	(Passwords start from the Output submenu)
SyS	(Passwords start from the System submenu)
CALib	(Passwords apply to the Calibration submenu only)

default setting: **CALib**

4.2.4.2 AUtOCy (Automatic cycle)

Autocycle is a parameter which is used to control the way that the menu operation

works. If Autocycle is enabled (its default state), the menu steps on to the next menu entry after each menu item action. This is convenient when programming a completely new set of parameters into the unit. After each menu item has been programmed, the

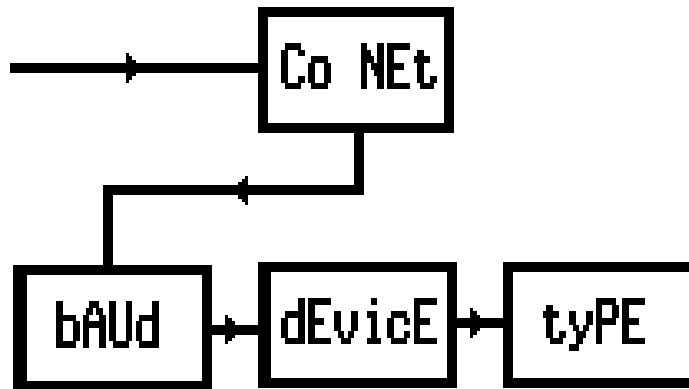

next one is stepped on to. There are certain situations, however, when this is inconvenient. Switching the Autocycle feature off (Setting it to FALSE) will inhibit any automatic stepping.

There are two possible options:

trUE (Autocycle enabled)

FALSE (Autocycle disabled)

default setting: **trUE**

4.2.4.3 Co NEt (Communications submenu)

This submenu contains the parameters required for the communications to operate on the unit. The submenu is described as follows:

4.2.4.3.1 bAud (Baud rate)

This allows the transmit and receive baudrate to be set. The options are:

75 (75 baud)

150 (150 baud)
300 (300 baud)
600 (600 baud)
1200 (1200 baud)
2400 (2400 baud)
4800 (4800 baud)
9600 (9600 baud)

Default setting: **9600**

4.2.4.3.2 dEviCE (Network device number)

It is possible to multidrop up to 99 instruments on one network. The device number allocates a unique device reference for each individual unit. Note that without suitable buffering, there is a hardware limit of 30 instruments.

Default setting: **1**


4.2.4.3.3 tyPE (mode of Comms operation)

There are two modes of Comms operation possible. If the unit is to be operated within a network, or a host computer accesses selective data then Slave mode is used. The other mode, simply outputs a complete ASCII status report, consisting of the process variable and the state of any alarms or output options. It is possible to dump this data to a dumb terminal or to a printer.

The options are:

SLAVE (Slave mode)
ASC OP (Ascii output report mode)

Default setting: **SLAVE**

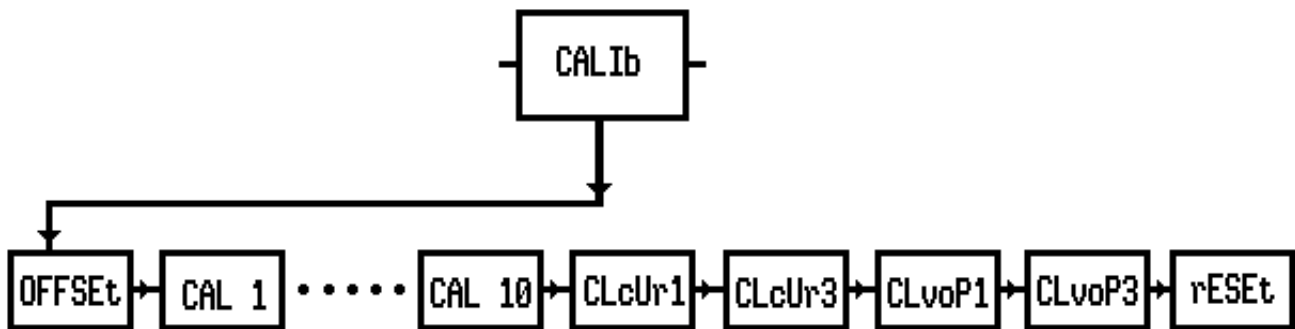

4.2.5 CALIb (Calibration submenu)


This submenu, which will always have password protection, provides access to enable the total (or partial) recalibration of the System. Casual access into this submenu is therefore discouraged.

Do not enter the CALIB submenu unless you know exactly what you are doing. If the calibration settings are disturbed, it may be necessary to return the unit to the factory.

The submenu may alter with the fitting of various output options, but is represented as follows:

4.2.5.1 OFFSET (Input offset adjustment)

This is a numeric value in engineering units which is added to the Process Variable value in order to take out any system offset errors. This should be used with care as

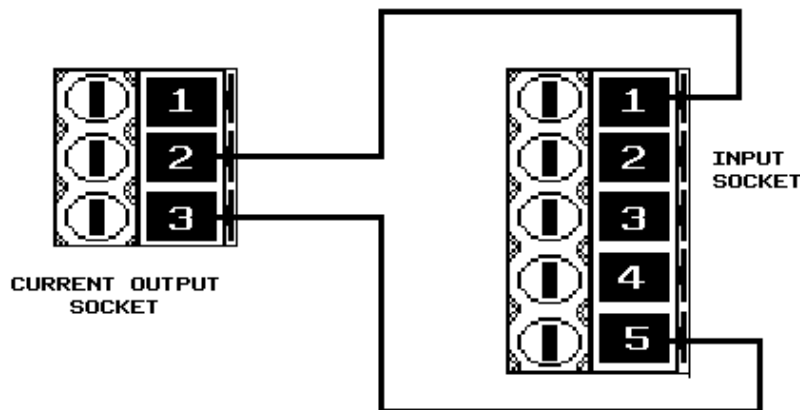

there is no indication in the Process Variable display mode that this offset is being applied and is thus capable of introducing an inadvertent error.

Default setting: **0.0**



4.2.5.2 CAL 1 to CAL 10 (Input calibration)




These are used to calibrate the input system. Not recommended for users.


4.2.5.3 CLcUr1(3) Calibrate Current o/p board

If the Current Output Board is to be fitted in the unit by the user, it is necessary to use this entry to calibrate the option.

Connect up the Current output board to the Sensor input board as shown below.

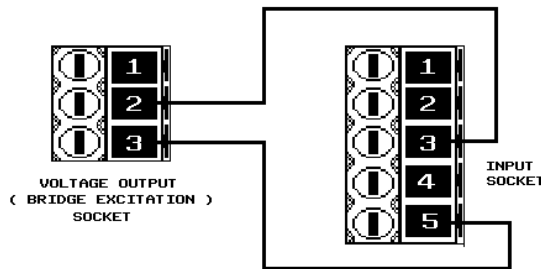

 Press ENTER, to commence automatic calibration.



Note if the display reads either '**siglo**' or '**sighi**' recalibrate the output card again.

 
On completion ESCAPE back to the Process Variable display mode. This stores the calibration information in non-volatile memory.



4.2.5.4 CLvoP1(3) Calibrate Bridge excitation board

If the Voltage Output Board (Bridge Excitation) is to be fitted in the unit by the user, it is necessary to use this entry to calibrate the option.

Connect up the Voltage output board to the Sensor input board as shown below.



Press ENTER, to commence automatic calibration.

Note if the display reads either '**siglo**' or '**sighi**' recalibrate the output card again.

On completion, ESCAPE back to the Process Variable display mode. This stores the calibration information into non-volatile memory.

4.2.5.5 rESEt (Reset all parameters to default)













Pressing ENTER on this option resets all programmable parameters to their default values.

5.0 OPERATION

Previous sections have shown how the unit may be configured for user applications. This section shows how the user may access additional information from the Display PV mode and an explanation of how the instrument processes input data and activates outputs.

5.1 USER OPERATION

There are a number of facilities available from the Display PV mode using the front panel keys. These are summarised in the table below.

KEYPRESS			ACTION	
CYCLE				VIEW SETPOINTS
SHIFT				VIEW PEAK VALUE
INC				VIEW VALLEY VALUE
CLEAR				CLEAR LATCHED ALARMS RESET PEAK VALLEY

In addition, it is possible to get into Menu Mode by pressing




followed by



5.1.1 VIEW SETPOINTS

The function of this mode is to provide a quick read-only access to the Alarm setpoints. This operation is easier to do than to describe and is therefore shown diagrammatically below.

Pressing the CYCLE key puts you into VIEW SETPOINTS MODE. The display will show the first setpoint number available to be viewed, possibly SETP1. Successive pressing of the CYCLE key will cycle through the other available setpoints. If any setpoint value is required to be viewed, the SHIFT key is pressed. The actual setpoint value is now displayed.

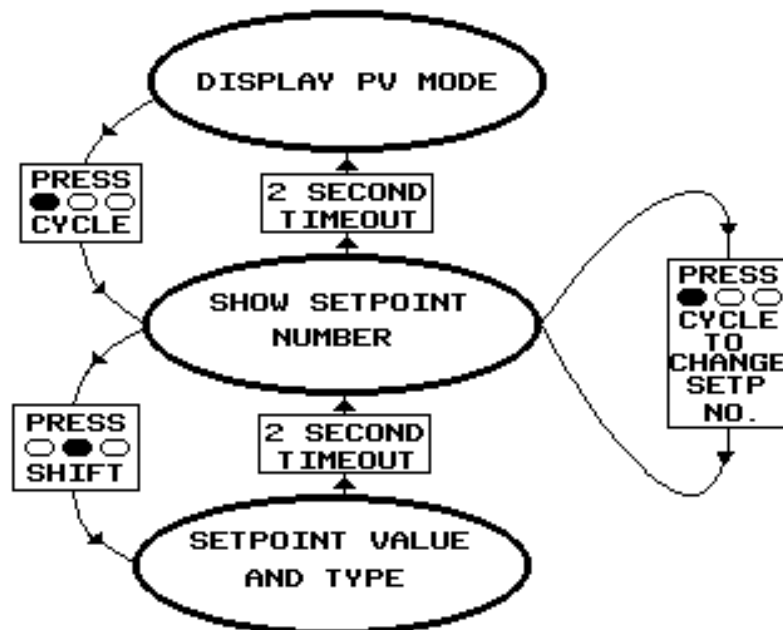

The format of the setpoint display will be
<alarm action><Setpoint value>

where alarm action will be one of four single characters:-

o-Alarm Off; **L**-Low Alarm; **h**-High Alarm; **d**-Deviation Alarm

The Setpoint will be a five digit value scaled in engineering units.

5.1.2 VIEW PEAK VALUE

The maximum Process Variable value measured since switch-on or last reset of Peak/Valley (See 5.1.4), is continuously calculated within the instrument. The current value may be inspected by pressing the SHIFT key whilst in Display PV mode. The display will briefly show **PEAc** before revealing the actual peak value. This value will remain displayed until 1s after the key is released. It will then return to the Process variable display.

5.1.3 VIEW VALLEY DISPLAY


This operates in exactly the same way as the View Peak display except that the INC key is used and the minimum Process Variable value displayed.

5.1.4 RESET PEAK/VALLEY & CLEAR LATCHED ALARMS

Pressing the CYCLE and INC keys simultaneously performs two independent functions. It sets the Peak and Valley values to the current Process Variable value and it also clears any latched alarms.

5.2 INSTRUMENT OPERATION

This section describes how the instrument processes input data and activates outputs. The diagram below shows the sequence of processing.

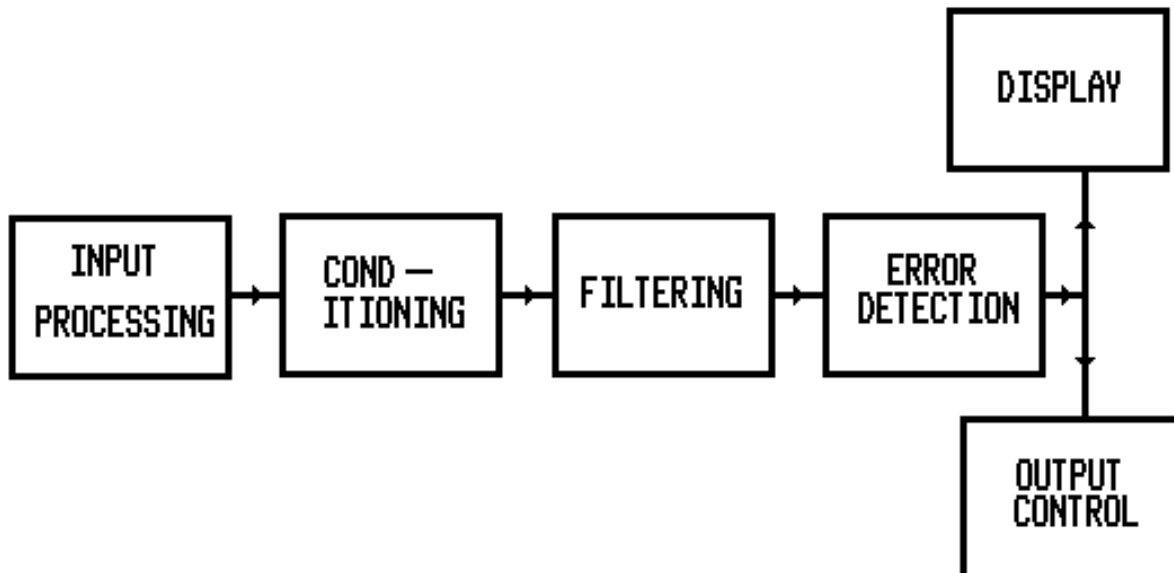

5.2.1 INPUT PROCESSING

The electrical input is read in and converted to a digital value, corrections are made for offset and drift. Readings are made ten times a second.

5.2.2 SIGNAL CONDITIONING

This process depends largely upon the menu programming. If the input is a temperature sensor, the temperature characteristic is linearised here. If the input is a voltage or current, the conditioning will be Linear, Square root, Power Law or User defined, as programmed in the Inputs menu.

5.2.3 FILTERING

The programmable filter reduces noise from the conditioned input.

5.2.4 ERROR DETECTION

The instrument and the input is checked for a range of faults.

5.2.4.1 OPEN CIRCUIT

This is only checked for temperature sensors. If an open circuit is detected, the process variable is forced full positive range or full negative range depending upon the **brnout** setting in the Inputs menu. **burn** will be shown on the display in place of the Process Variable display.

5.2.4.2 UNDER RANGE/ OVER RANGE

This is only checked for voltage or current inputs. If the input value is found to be greater than 107% of full range, or less than -107% of full range, it is limited to 107% or -107% of full range respectively. In this case, either **OVER** or **UNDER** is shown on the display instead of the process variable value. This condition will also occur if the user nonlin conditioning is used and the input falls below the minimum entry or exceeds the maximum.

5.2.5 OUTPUT CONTROL

The alarm Relays, LED alarms and current retransmission options may all use the filtered, conditioned Process Variable Value. This is the same value which is displayed.

This process responds to any errors detected. If the input is a temperature sensor, an open circuit will invoke the burnout condition, going to hi scale or low scale depending upon the burnout programming.

5.6 DISPLAY

This will show the Process Variable in engineering units, filtered and conditioned. If any errors have been detected, they will be indicated on the display. The number of places of decimal will be as defined in the **rES** entry of the inputs menu, **but if there are more significant digits than can be displayed within the five digit field available, the number will be right justified.** For example 1234.567 will be displayed as 1234.57. Although the electrical input is updated ten times a second, the display is updated at the more visually practical rate of three times a second.

5.7 INSTRUMENT FAULTS

The instrument continuously checks itself for correct operation. Detection of a fault causes an error message to be displayed. The error messages are as follows :

Err 01 Non Volatile memory failure

Err 02 RAM decode error

Err 03 RAM size unrecognised

Err 04 Input card error

Err 05 EPROM checksum error

Err 06 Ram Fault

Err 07 Calibration data corruption fault

burn - SENSOR BURNOUT ERROR

Open circuit RTD (Any one of the three wires)

Open circuit Thermocouple

Cold junction thermistor temperature out of bounds

Cold junction thermistor electrical fault

OvEr / UndEr - INPUT SENSOR FAULT

Sensor over-range

Sensor under-range

Open loop current circuit

RTD short circuit

Open circuit mV

User non-lin function out of bounds


If an error message is displayed first remove power and re-apply. If the error condition remains the instrument should be returned to the supplier.

APPENDIX A

FITTING OF LEGEND/IDENTIFICATION

A standard sheet of legends is supplied which may be used for the engineering units being displayed. The selected legend should be carefully cut from the overall sheet, marked with any appropriate plant tag or identification, and pushed gently into the slot provided in the bottom right hand corner of the front panel of the instrument (see drawing below). These legends may be subsequently removed by means of a sharp pin in the notch provided.

The Legend sheet is included with the instrument.

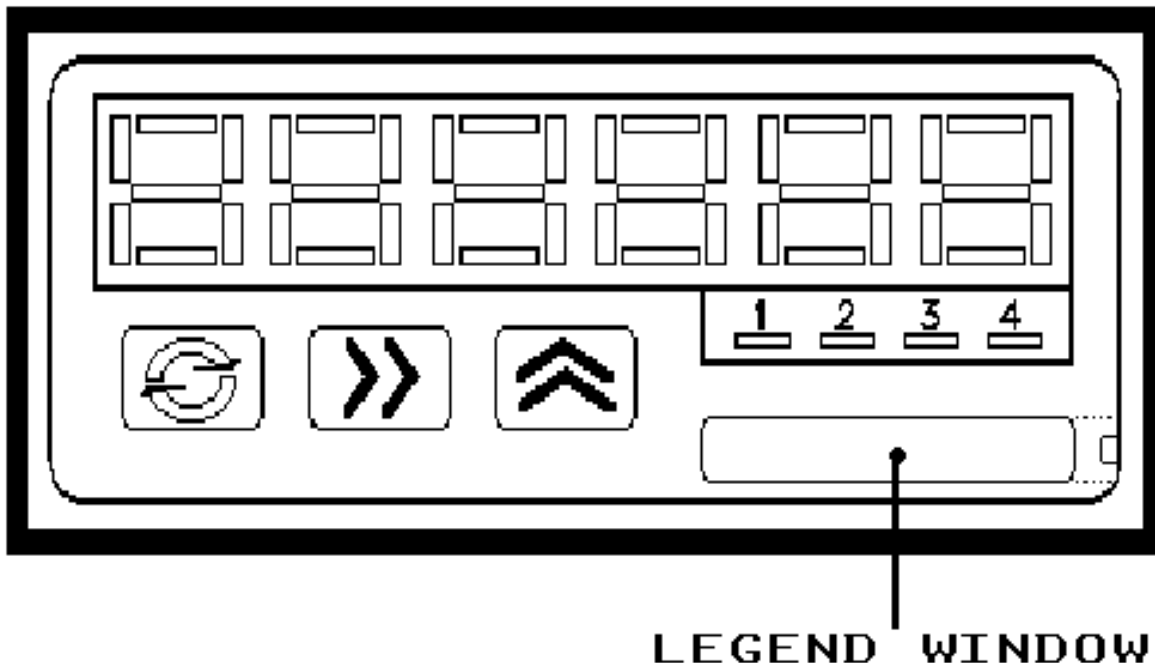

APPENDIX B

TECHNICAL SPECIFICATION

INPUT PERFORMANCE @20°C

Type	Nominal range ^(vii)	Resolution ^(vi)	Accuracy ⁽ⁱ⁾
TC K	-270 to 1200°C	0.1°C	1°C
TC J	-210 to 760°C	0.1°C	1°C
TC T	-270 to 400°C	0.1°C	1°C
TC R	0 to 1750°C	0.5°C	2°C
TC S	0 to 1750°C	0.5°C	2°C
TC E	0 to 650°C	0.5°C	1°C
TC F	0 to 600°C	0.5°C	1°C
TC N	0 to 1300°C	0.5°C	1°C
TC B	1000 to 1800°C	0.5°C	3°C
Cold Junction	0 to 50°C ⁽ⁱⁱⁱ⁾	0.1°C	1°C ^(v)
Pt100	-200 to 800	0.05°C	0.1 +/- 0.1% ⁽ⁱⁱ⁾
10volts	-10V to 10V	0.004%	0.02%
1-5volts	1V to 5V	0.008%	0.04%
1volt	-1V to 1V	0.004%	0.02%
100mV	-0.1V to 0.1V	0.004%	0.02%
4-20mA	4 to 20mA	0.004%	0.1%
0-20mA	0 to 20mA	0.004%	0.1%
0-10mA	0 to 10mA	0.004%	0.1%
Transmitter excitation voltage:			19V
Maximum transmitter excitation current:			25mA

ADDITIONAL INPUT SPECIFICATION

Input Type	Average^(iv) Acquisition Rate	Input impedance (RTD current)	Thermal drift per °C
T/C	6.8Hz	1M ohm ^(ix)	0.001%
mV	8.9Hz	1M ohm ^(ix)	0.001%, 0.004% ^(x)
Volts	8.9Hz	2M ohm	0.002%, 0.011% ^(xi)
Current	8.9Hz	51 ohm	0.001%
Pt 100	1.7Hz	(less than 1.1mA)	0.013°C
Cold junction(see T/C)		NA	0.06°C

Isolation Power Supply: 2500VAC)
 Output Options: 500VAC) see safety information
 Comms Interface: 500VAC) on page 8

INPUT OVER-RANGE PROTECTION

Input Pin	Usual Function	Absolute Maximum Rating
1	0V	NA
2	RTD	30VAC ^(xii)
3	Volts	200VAC ^(xii)
4	Millivolts	200VAC ^(xii)
5	Curret	100mA

RELAY OUTPUT BOARD (OPTION 01 AND 02)

Maximum Rated Load	7A@250V	7A@30V
Maximum Power	1750VA	210W
Maximum Switching Voltage	380V	125V

Electrical Life 10⁵ operations at rated load
 Mechanical Life 50 million operations

Contact shunt capacitance 200pF
 This is due to the Varistor and causes a reactance of 15Mohms at 50Hz.
 Alarm detection delay 200mS

CURRENT RETRANSMISSION BOARD (SOURCE AND SINK) OPTION 03

PERFORMANCE @20°C

Accuracy:	20uA	(0.1% of Max current)
Resolution:	2uA	(0.01% of the input range)
Response:	100ms	for approx 63% of step change
Minimum Current O/P:	0mA	
Maximum Current O/P:	21mA	(approx)
Thermal Drift:	900nA/°C	(0.0045% of Max current /°C)

Maximum loop impedance:	1000 ohms	(Source)
Output voltage drop @20mA:	3 Volts	(Source & Sink)
Maximum external loop power supply voltage:	30VDC	(Sink)
Minimum practical loop power supply voltage:	$(R_L * 21mA) + 3$	(Sink)
	Where R_L is the Loop impedance	

Ripple Current: Approx 5uA

Isolation:	Input	500VAC)
	Power Supply	2500VAC) See safety information
	Comms I/F	500VAC) on page 8

VOLTAGE OUTPUT BOARD (OPTION 04) PERFORMANCE @20°C

Range:	2-24 volts DC
Accuracy:	24mV (0.1% of Max voltage)
Maximum Current O/P:	50mA ^(xi)
Thermal Drift:	1080uV/ °C (0.0045% of Max voltage /°C)
Ripple:	Approx 6mV
Fixed Voltage:	24V
Programmable Voltages:	2,2.5,3,3.5,4,4.5,5,6,7,8,9,10,12,15,20

Isolation:	Input	500VAC	(see safety
	Power Supply	2500VAC	information
	Comms I/F	500VAC	(on page 8

RS485 COMMUNICATION OPTION

GENERAL

Configuration	Four wire, Half Duplex
Maximum fan-out	32 units ^(viii)
Baud Rate	9600
Data bits	8
Start bits	1
Stop bits	1
Parity	none
Maximum line length	4km
Protocol	based on ANSI X3.28

TRANSMITTER

Maximum differential output voltage	5v
Output voltage with 50ohm load	>1.5v

RECEIVER

Differential input threshold voltage	+/-200mV
Input receiver impedance	12kohms
Common mode range	-7v to +12v

ENVIRONMENTAL

Ambient operating temperature range	0 to 50°C
Ambient storage temperature range	-20 to 80°C
Relative Humidity	20% to 95% non condensing
EMI Emissions	BS EN61326
EMI Susceptibility	BS EN61326
Safety	BS EN61010-1
Power Supply	240VAC,110VAC,24VAC 50/60Hz
Power consumption	6.5Watts max
Max in-rush current	100mA @240VAC
Front panel sealing(with gasket)	IP65

PHYSICAL

Dimensions	48 x 96 x 140mm
Mounting	Panel cutout(91 to 92)mm x (43 to 44)mm
Terminals	All two part captive screw terminals
Weight	850g

- (i) The accuracy values represent +/- spread from nominal. Unless otherwise stated '%' represents the percentage of full scale value.
 - (ii) '%' represents percentage of reading in stated units
 - (iii) Represents the valid thermistor temperature range used for measuring Cold junction temperature.
Slight internal warming from the unit means that temperature is 3 or 4°C above ambient.
 - (iv) Average taken over a 1 second time frame. Acquisition defined as complete refresh of electrical sensor value including readings to compensate for gain and offset errors.
 - (v) Cold junction accuracy includes thermal tracking error, temperature measurement error and linearisation error. This should be added to the individual thermocouple accuracy to get an overall accuracy value.
 - (vi) '%' represents percentage of full scale value.
 - (vii) Input is measured correctly within a small margin outside the normal range. This is 7% for bipolar (+/-) electrical inputs. Current inputs that go down to zero do not under-range otherwise all other sensor inputs have a 7% over/under-range margin.
 - (viii) This may be extended with suitable buffering
 - (ix) There is an internal 10M ohm pull down resistor to -2.5V. This is only significant for high source impedance mV inputs.
 - (x) 50mV and 100mV respectively.
 - (xi) 1V and 10V respectively.
 - (xii) With respect to Pin 1 or Pin 5.
-

APPENDIX C

TROUBLESHOOTING

1) UNIT IS COMPLETELY DEAD

- 1.1) Check supply voltage is present on the rear connector
- 1.2) Check that supply voltage corresponds with voltage stated on the top of the instrument
- 1.3) Consult service manual for instructions on replacing internal fuse

2) INCORRECT READING

- 2.1) Check that the unit is set up for the correct sensor type
- 2.2) Check that the Engineering range has been set correct for voltage and current and correct units for temperature sensors.
- 2.3) Check that thermocouples have correct compensation cable and the polarity is correct.
- 2.4) Check that all three wires are connected properly for an RTD.

3) UNDER/OVER RANGE

- 3.1) Check that the sensor wiring is correct.
 - 3.2) Check that voltage/current sensor is not open circuit
 - 3.3) Check that the unit is set up for correct sensor
-

4) ERROR CODES

Several error codes may appear due to the internal self checking of the instrument. These indicate serious faults which cannot be rectified by the user. In the event of these codes being displayed, the unit should be returned to the supplier.

The Error Codes are as follows:

Err 01	Non Volatile memory failure
Err 02	Ram decode error
Err 03	Ram size unrecognised
Err 04	Input card Error
Err 05	EPROM Checksum error
Err 06	RAM fault
Err 07	Calibration data corruption fault

APPENDIX D

MAINTENANCE

The instrument is a precision piece of electronic measuring equipment, and yet, due to the nature of its design, requires very little maintenance.

1) CLEANING

The only cleaning required is to wipe the front panel with a damp cloth containing a small quantity of detergent.

DO NOT use an abrasive cleaner

DO NOT use any industrial solvents as they might affect the polyester membrane.


DO NOT apply water to any other part of the instrument other than the front panel. The rear of the instrument is not sealed, and water in this area could be dangerous and may lead to damage of the instrument.

APPENDIX E

USER COMMUNICATION SOFTWARE

This section aims to provide sufficient information to enable a user to write software for a Personal Computer to interface directly with instruments on a network. As all configuration and runtime data are available via the comms, there is great potential to tailor a system to a users individual requirements.

Information for electrically connecting a network of units is dealt within the wiring section of this manual. This section explains the software interface and the basic comms operation of the instrument. The schematic of a typical network showing three instruments is shown below. Note that this is not wiring detail, only a schematic of signal interconnections.

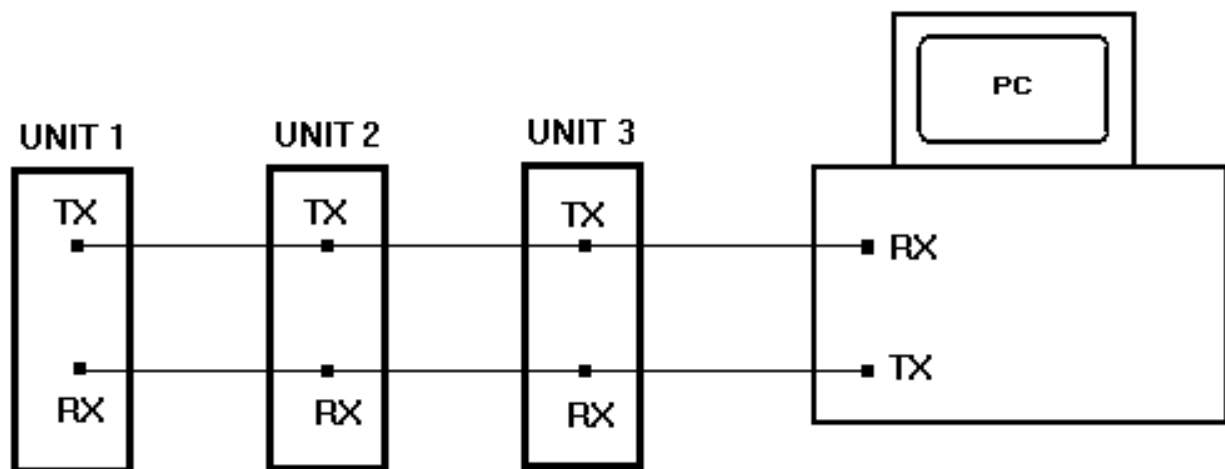

You will notice that the transmit lines from the units are connected together. This means that only one unit can transmit at a time without clashing the signal. For this reason the communication software in the instrument(s) only responds to messages issued by the PC. No messages are generated spontaneously by the units, in this way the PC maintains control over the network. Thus the PC is regarded as the MASTER and the units on the network are SLAVES.

The other problem obvious from the above schematic is that even though the MASTER transmits to all of the SLAVES simultaneously, only one may respond, otherwise signals will clash together. This is arranged by allocating each SLAVE unit a unique address. This address is called the device number and is programmed into the unit before it is connected to the network by programming the CO NET parameters menu within the SYS menu. See the programming section for details.

The comms messages issued by the host can be one of two types.

Data Request - MASTER requests data from a SLAVE.

Data Imposition - MASTER *writes* data to a SLAVE.

The most convenient way to describe these message types is to show an example for each message type. It is not important to understand the full detail of the message at this stage as this will be covered later, however the following control code definitions will probably be useful.

<SOH>	Start Of Header
<STX>	Start Of Text
<ETX>	End Of Text
<ACK>	Acknowledge
<BCC>	Block Check Character

For the purposes of this example assume that the MASTER is connected to three SLAVE units as shown in the above schematic. The Device numbers for the units are 1,2 and 3 and device number 2 has an Thermocouple input measuring 79.8 degrees C and an Alarm Output.

EXAMPLE 1 DATA REQUEST

The MASTER requests the Process Variable from SLAVE device 2. The process is initiated by the MASTER sending the following message.

02<STX>?CH000<ETX><BCC>

In order to see what actual data is sent from the host, see the table below. Note that the data is in hexadecimal.

PC MASTER TO SLAVE DEVICE(S) DATA REQUEST											
SOH	"02"		STX	"?CH000"						ETX	BCC
01	30	32	02	3F	43	48	30	30	30	03	BC

All three units receive the message, although units 1 and 3 will disregard it as the **02** carried in the initial part of the message designates the message as being for device 2 only. Device 2, on receipt of the message recognises the **02** address as its own device number and examines the main part of the message to see what action to take. The main part of the message in this case is **?CH000**. The question mark is the first character and is used to denote that the message is a data request. **CH** is a mnemonic representing CHannel value (Process Variable). A full list of mnemonics are available later on in this Appendix. The remainder of the message is called the index, and as there is only one Channel on this device it is superfluous and is set to zero. Having recognised a valid message, the instrument first acknowledges back to the host and then replies with the current Process Variable value. The format for the message is shown below, notice there is no device number embedded in the message- there is only one MASTER device.

SLAVE DEVICE TO MASTER REPLY										
ACK	SOH	STX	" 79.8"						ETX	BCC
06	01	02	20	20	37	39	2E	38	03	16

EXAMPLE 2 DATA IMPOSITION

For a second example, take the case of the MASTER issuing a message, this time to change an Alarm Setpoint value again directed at device 2.

The MASTER sends the following sequence.

PC MASTER TO SLAVE DEVICE(S) DATA IMPOSITION															
SOH	"02"		STX	IAS00180.0										ETX	BCC
01	30	32	02	21	41	53	30	30	31	38	30	2E	30	03	0C

The receipt of the message by device number 2 is exactly as in the previous example. This time, however, the ! indicates the message is a data imposition and applies to the Alarm Setpoint (AS). There are two alarms, the index **001** indicates that it applies the first Alarm (Alarm 2 would have an index of 002). Device 2 updates the Alarm setpoint with 80.0 and then responds with an acknowledgement as shown below.

There is one important point to understand here. The new Alarm Setpoint has been

SLAVE DEVICE TO MASTER REPLY					
ACK	SOH	STX	ACK	ETX	BCC
06	01	02	06	03	06

programmed into the device and will be used to control the Alarm operation. However, it has not been programmed into non-volatile memory within the instrument, so when power is removed, it will be lost and on powering the instrument again, the original setpoint value will be restored.

The next example shows how programmed data is stored to non volatile memory.

EXAMPLE 3 ACTION

Although, at the start of this section, it was stated that there are two types of message; a Data Request and a Data Imposition; there is strictly a third type. This message has the same format as a data imposition except no data is transferred and it has the effect of making the instrument do an action. In this case the action is to save all of the settings to non volatile memory.

The MASTER sends the following sequence.

Again device 2 receives the message which is initially treated as a Data imposition.

PC MASTER TO SLAVE DEVICE(S) DATA STORE								
SOH	"02"		STX	"!ds"			ETX	BCC
01	30	32	02	21	41	53	03	17

The **ds** mnemonic is taken as an instruction to do a data store to non volatile memory. An index or data is superfluous and is not included. On doing a data store an acknowledge is issued as shown below.

SLAVE DEVICE TO MASTER REPLY					
ACK	SOH	STX	ACK	ETX	BCC
06	01	02	06	03	06

THE CONTROL CODES

Up to now the control codes have broadly been ignored, although the function of most of them is probably self-evident from the above examples. These will be explained in more detail here.

The control codes have two functions. First of all, they provide markers to indicate the start of the message and separate the different types of data with the message. And secondly, they provide integrity checking of the message.

The <SOH> Start of Header control code will always be the first character in the message. This indicates that the Header will follow and has a value of 01.

The <STX> Start of Text character indicates that the Header information has finished and the Text or main body of the message will follow. this has a value of 02.

The <ETX> End of Text character indicates the end of the end of the main part of the message and the Block check character will follow. The End of Text character has a value of 03.

The <BCC> has not got a fixed value like the other control codes as it is a calculated value based upon a modulo 256 sum of all non control code characters in the message. This is calculated for each message before it is transmitted and the receiver confirms that a repeat calculation of the message results in the same block check value. If there has been any corruption in any part of the message, the block check character and the recalculated value will not tie up. If an instrument receives a corrupted message, it is ignored. It is up to the writer of PC software to determine what the MASTER does in such a situation.

The Block check character is for the message in example 1 is calculated as follows:-

30
32
3F
43
48
30
30
30

Total 1BC

Modulo 256 (least significant byte) **BC**

EXAMPLE BASIC PROGRAM

The following basic program provides an example of a simple communications interface to run on a PC. The program is coded to use COM1 and communicate with device 1, but these may be modified as required.

```
10 OPEN ``COM1:9600,N,8,1" AS #1: header$="01"
20 INPUT ``Enter text string ( 0 to quit)";text$:if text$="0" goto 90
50 gosub 100: PRINT#1, TX$
70 gosub 200: if left$(text$,1) = `!" then mid$(text$,1,1)= `?":goto 50
80 print ``RECEIVED[ `';rx$;" ]": goto 20
90 end
100 REM Calculates block check character based on header and text strings
150 sum=0: lh=len(header$):lt=len(text$)
170 for i=1 to lh:sum=sum+asc(mid$(header$,i,1)):next
180 for i=1 to lt:sum=sum+asc(mid$(text$,i,1)):next:bcc=sum-(256*int(sum/256))
190tx$=chr$(1)+header$+chr$(2)+text$+chr$(3)+chr$(bcc)
195 return
200 REM Reads in received data without checking block check character
240 rx$=""
245 ch$ = input$(1,#1):if ch$ <> chr$(1) goto 245
250 ch$ = input$(1,#1):if ch$ <> chr$(2) goto 250
260 ch$ = input$(1,#1):if ch$ = chr$(3) goto 270
265 rx$=rx$+ch$:goto 260
270 return
```

The following tables list the available comms mnemonics for the instrument.

RATE IN ENGINEERING UNITS

INSTRUMENT COMMS MNEMONICS

DESCRIPTION	MNEM	INDEX	DATA	FORMAT
PROCESS VARIABLE IN ENGINEERING UNITS	CH	NA	VALUE	ENGINEERING UNITS
NO OF DECIMAL PLACES FOR ENG UNITS	DP	NA	OPTAIN	0,1,2,3
SENSOR INPUT TYPE	IT	NA	OPTION	VOLTS,RTD,CURRENT,T/C
VOLTAGE RANGE	RV	NA	OPTION	100mV,1V,1-5V,10V
CURRENT RANGE	RC	NA	OPTION	4-20,0-20,0-10mA
THERMOCOUPLE TYPE	ST	NA	OPTION	K,J,T,R,S,E,F,N,B
TEMPERATURE SENSOR BURN OUT	BO	NA	OPTION	HIGH, LOW
TEMPERATURE SENSING UNITS	UT	NA	OPTION	°C, °F
ENGINEERING UNITS HIGH RANGE	IH	NA	VALUE	REAL
ENGINEERING UNITS LOW RANGE	IL	NA	VALUE	REAL
INPUT CONDITIONING	IC	NA	OPTION	LINEAR,SQUARE-ROOT,USER-DEFINED
FILTER FACTOR TIME CONSTANT (SECONDS)	FF	NA	OPTION	OFF, 0.5,1, 2, 4, 8, 16, 32
FILTER JUMP-OUT (PERCENTAGE)	FJ	NA	OPTION	NONE, 1, 5, 10
USER LINEARISATION ELECTRICAL UNITS	IX	1-13	VALUE	ELECTRICAL UNITS
USER LINEARISATION ENGINEERING UNITS	IY	1-13	VALUE	ENGINEERING UNITS
ALARM ACTION	AA	1,2,3,4	OPTAIN	OFF,LOW,HIGH,DEVIATION
ALARM LATCH ENABLE	AL	1,2,3,4	OPTAIN	FALSE,TRUE
ALARM SETPOINT	AS	1,2,3,4	VALUE	ENGINEERING UNITS
ALARM HYSTERESIS	AH	1,2,3,4	VALUE	PERCENTAGE OF ENGINEERING RANGE
ALARM DEVIATION	AD	1,2,3,4	VALUE	PERCENTAGE OF ENGINEERING RANGE
ALARM RELAY SENSE	As	1,2,3,4	OPTAIN	NON-INVERTED,INVERTED
ALARM DELAY (SECONDS)	Ad	1,2,3,4	OPTAIN	OFF,1,2,5,10,15,20
ALARM CONDITION	AC	1,2,3,4	OPTAIN	NO-ALARM,SENSED,DETECTED,LATCHED
CURRENT RTX SPAN OUTPUT	SI	1,3	OPTION	4-20,0-20mA
CURRENT RTX MODE OF OPERATION	TI	1,3	OPTION	RETRANSMISSION,PRESET
CURRENT RTX HIGH RANGE	HI	1,3	VALUE	ENGINEERING UNITS
CURRENT RTX LOW RANGE	LI	1,3	VALUE	ENGINEERING UNITS
CURRENT RTX PRESET VALUE	PI	1,3	VALUE	ENGINEERING UNITS
PROGRAMMABLE VOLTAGE OUTPUT	OV	1,3	OPTION	2, 2.5, 3, 3.5, 4, 4.5, 5, 6, 7, 8, 9, 10, 12, 15, 20
AUTOCYCLE	Ac	NA	OPTION	ENABLED,DISABLED
PASSWORD CODE	PC	NA	VALUE	UNSIGNED INTEGER
PASSWORD LEVEL	PL	NA	OPTION	SETPOINT,INPUT,OUTPUT,SYSTEM,CALIB
USER OFFSET	UO	NA	VALUE	ENGINEERING UNITS
GENERAL SYSTEM STATUS REPORT	GS	NA	STRING	
SYSTEM CONFIGURATION REPORT	SY	NA	STRING	
STORE DATA TO NON-VOLATILE MEMORY	ds	NA	NO DATA	

DATA FORMAT DEFINITION

NO DATA No data actually transferred.

This type of message initiates an activity within the instrument rather than accessing data. For instance, sending the Text string **!ds** will cause the unit to store its scratch parameter data area to EEPROM. This must always be done after configuration parameters have been modified via the Comms. If this is not done the changes will be lost when the instrument is switched off.

OPTION An ASCII number corresponding to the position of an item within the list of parameters denoted in the associated FORMAT column of the Message table. The numbering starts from zero. E.G An Alarm action (AA) High Alarm will have a data field corresponding to 2.

VALUE These are ASCII numeric fields which are scaled and formatted according to the entry in the FORMAT column of the message table.

TYPE OF DATA	LOW LIMIT	HIGH LIMIT	FIELD WIDTH	DECIMAL PLACES
ENGINEERING UNITS	-ENG HI - 7%	+ENG HI +7%	6	DP
REAL	-32000	64000	6	DP
ELECTRICAL UNITS				
10 Volt range	-10	10	6	2
1-5 Volt range	0	5	6	3
1 Volt range	-1	+1	6	3
100mV range	-100mV	+100mV	6	1
4-20mA	0	20	6	2
0-20mA	0	20	6	2
0-10mA	0	10	6	2
% of Eng range	0.00	99.99	5	2
Unsigned integer	0	65535	5	0

STRING This is an individually formatted string, usually (but not always) read-only. See below for details.

SY: System request

This reports upon the identity of the instrument. This may only be data requested the returned data format is as follows.

aabbbbb0ccde0000ff0000

aa: device type DM for Digital Meter
bbbbbb: Issue date of software
cc: Variant type; U=01, C=02; A=03
d: Contents of option slot 1;
Nothing fitted=0;
Single Relay board=2;
Dual Relay board=3;
Volt o/p=4;
RTX board=5
e: Contents of option slot 2; Format as above.
ff: Number of channels; 01 always

A		D	
Accuracy	75	Display information	72
Alarms		E	
Submenu	48	Editing a parameter	31
alarm state	49	Error codes	81
latch enable	50	F	
setpoint	50	Instrument faults	73
hysteresis	51	Filtering	
deviation band	52	description	71
relay state	53	input filtering	42
delay	54	jump out	43
B		G	
Burnout	41	Comms board grounding problems	24
C		I	
Calibration submenu		Input wiring	
input offset adjustment	64	sensor connection	11
input calibration	65	voltage input	
current o/p card calibration	65	millivolt	12
voltage o/p card calibration	66	voltage	12
reset parameters to default	67	voltage greater than 10V	13
Cold junction select	39	current input	
Comms board		external loop	14
description	21	internal loop	14
wiring	22	thermocouple	15
line termination	23	RTD	15
connecting above 32 units	24	transducer bridge	16
Communication submenu		Input submenu	
baud rate	62	sensor connection	37
device number	63	electrical range	37
comms state	63	thermocouple type	38
Communication software	83	temperature sensing units	38
Comms mnemonics	90	resolution	39
Current retransmission		select cold junction	39
wiring	19	programme cold junction	39
current output submenu		engineering range	40
output span	55	burnout	41
output operation	55	filtering	42
retransmission range	56	jump out	43
preset value	58	conditioning	44
calibration	65	user linearisation	45
		square root	46
		power 3/2, 5/2 law	47

L		R	
Legend sheet	74	Relay boards	
M		wiring	17
Maintenance	82	submenu	
Mechanical installation	9	alarm state	50
Menus		latch enable	50
setpoints	35	setpoint	50
input	36	hysteresis	51
output	48	deviation band	52
system	60	invert activation of relay	53
calibration	64	delay	54
		Reset all parameters to default	67
O		S	
Output card		Sensor connections	11
wiring		Setpoints	
relay board	17	setpoints submenu	35
current board	19	view setpoints	69
voltage board	20	Signal conditioning	71
calibration	65	System parameters	
Output submenu		password submenu	60
relay and led alarms submenu	49	communication submenu	64
current output board	55	Specification	75
bridge excitation board	59		
P		T	
Password submenu		Troubleshooting	80
code	61	U	
level	61	Unpacking the instrument	6
automatic cycle	61	V	
Power supply		Voltage excitation card	
wiring	10	accuracy	77
wiring precautions	11	voltage board calibration	66
Programming		voltage outputs	59
tutorial guide	27	wiring	20
user key definitions	28	W	
getting into menu mode	28	Wiring	
moving around the menu	29	input connections	12
entering into a submenu	29	output connections	17
editing a parameter	31	comms connections	21
escaping from submenus	33		
